

\*\*\*\*\*  
USACE / NAVFAC / AFCEC UFGS-33 09 54 (August 2018)

Preparing Activity: USACE

-----  
Superseding  
UFGS-33 09 54 (February 2010)

## UNIFIED FACILITIES GUIDE SPECIFICATIONS

References are in agreement with UMRL dated April 2025

\*\*\*\*\*

### SECTION TABLE OF CONTENTS

#### DIVISION 33 - UTILITIES

#### SECTION 33 09 54

AVIATION FUEL PUMP CONTROL AND ANNUNCIATION SYSTEM (TYPE [IV][V])

08/18

#### PART 1 GENERAL

- 1.1 SYSTEM OVERVIEW
- 1.2 GENERAL REQUIREMENTS
- 1.3 REFERENCES
- 1.4 SUBMITTALS
- 1.5 OPERATION AND MAINTENANCE MANUALS
  - 1.5.1 Schedule and Content
  - 1.5.2 Assembly
- 1.6 TOOLS AND SPARE PARTS
- 1.7 EXPERIENCE AND QUALIFICATIONS
- 1.8 WARRANTY

#### PART 2 PRODUCTS

- 2.1 PUMP CONTROL PANEL (PCP) AND COMPONENTS
  - 2.1.1 Enclosure
  - 2.1.2 Ventilation System
  - 2.1.3 Ground Bar
  - 2.1.4 Standard Indicator Lights
  - 2.1.5 Selector Switches
  - 2.1.6 Pushbuttons
  - 2.1.7 Relays
  - 2.1.8 Nameplates
  - 2.1.9 Transient Voltage Surge Suppression Devices
  - 2.1.10 Terminal Blocks
  - 2.1.11 Circuit Breakers
  - 2.1.12 Uninterruptible Power Supplies
  - 2.1.13 Miscellaneous Power Supplies
  - 2.1.14 Alarm Annunciator
  - 2.1.15 Alarm Horns
  - 2.1.16 Laptop Computer
    - 2.1.16.1 Hardware
    - 2.1.16.2 Software

- 2.1.17 Personal Computer (PC)
  - 2.1.17.1 Hardware
  - 2.1.17.2 Software
- 2.1.18 Printer
- 2.1.19 FCC Computer
  - 2.1.19.1 Hardware
  - 2.1.19.2 Software
- 2.2 PROGRAMMABLE LOGICAL CONTROLLER (PLC) HARDWARE AND SOFTWARE
  - 2.2.1 General
  - 2.2.2 Central Processing Unit Module
  - 2.2.3 Power Supply Module
  - 2.2.4 Program Storage/Memory Requirements
  - 2.2.5 Input/Output (I/O) Modules
  - 2.2.6 Interfacing
  - 2.2.7 Program Requirements
  - 2.2.8 Diagnostics

## PART 3 EXECUTION

- 3.1 PUMP CONTROL PANEL (PCP) AND COMPONENTS
  - 3.1.1 General
  - 3.1.2 Wiring
    - 3.1.2.1 Methods and Practices
    - 3.1.2.2 Control Wiring Data Lists
  - 3.1.3 Certified Pump Control Panel (PCP) Shop Test Report
  - 3.1.4 Ventilation System
  - 3.1.5 Grounding
  - 3.1.6 Indicator Lights, Switches, and Pushbuttons
  - 3.1.7 Transient Voltage Surge Suppression Devices
  - 3.1.8 Terminal Blocks
  - 3.1.9 Circuit Breakers
  - 3.1.10 Uninterruptible Power supplies
  - 3.1.11 Power Supplies
  - 3.1.12 Alarm Annunciator and Horns
    - 3.1.12.1 Non-critical Alarms
    - 3.1.12.2 Critical Alarms
    - 3.1.12.3 Alarm Sequence
  - 3.1.13 Personal Computer
    - 3.1.13.1 Screen Number 1
    - 3.1.13.2 Screen Number 2
    - 3.1.13.3 Screen Number 3
    - 3.1.13.4 Screen Number 4
    - 3.1.13.5 Screen Number 5
    - 3.1.13.6 Screen Number 6
    - 3.1.13.7 Screen Number 7
    - 3.1.13.8 Screen Number 8
    - 3.1.13.9 Screen Number 9
  - 3.1.14 Laptop Computer
- 3.2 PROGRAMMABLE LOGICAL CONTROLLER (PLC) HARDWARE AND SOFTWARE
  - 3.2.1 General
  - 3.2.2 Programs
- 3.3 GRAPHICS DISPLAY SCREEN
  - 3.3.1 General
  - 3.3.2 Display Presentation
  - 3.3.3 Process Schematic
  - 3.3.4 Digital Flow and Pressure Indicators
- 3.4 INSTALLATION
  - 3.4.1 Shop Drawing
  - 3.4.2 System Start-Up and Testing

- 3.4.3 Training Plan for Instructing Personnel
- 3.5 PLC CONTROL SYSTEM SEQUENCE OF OPERATION
  - 3.5.1 General
    - 3.5.1.1 Abbreviations
  - 3.5.2 Operating Tanks
    - 3.5.2.1 Level Control
    - 3.5.2.2 Level Control
    - 3.5.2.3 Outlet Valve
  - 3.5.3 Product Recovery Tank
    - 3.5.3.1 Fuel Transfer Pump (FTP)
    - 3.5.3.2 Overfill Valve (OV)
    - 3.5.3.3 High Level Alarm
    - 3.5.3.4 High-High Level Alarm
    - 3.5.3.5 Leak Detection
  - 3.5.4 Fueling Pumps (FP)
  - 3.5.5 Jockey Pump (JP)
  - 3.5.6 Pumphouse Drain Pump (PDP)
  - 3.5.7 Flow Switch, FP
  - 3.5.8 Flow Switch, JP
  - 3.5.9 Flow Switch, PDP
  - 3.5.10 Transmitters
    - 3.5.10.1 Pressure Indicating Transmitter (PIT)
    - 3.5.10.2 Differential Pressure Transmitter (DPT)
    - 3.5.10.3 Pressure Sensors (PS)
  - 3.5.11 Control Valves
    - 3.5.11.1 Flushing Valve (FV)
    - 3.5.11.2 Pressure Control Valve (PCV)
    - 3.5.11.3 Backpressure Control Valve (BPCV)
  - 3.5.12 Safety Circuit
    - 3.5.12.1 Emergency Stop Status
    - 3.5.12.2 Emergency Shutoff Valves (ESO) Status
    - 3.5.12.3 Circuit Power Status
  - 3.5.13 Pump Control Panel
    - 3.5.13.1 CPU Faults
    - 3.5.13.2 Input Select Switch
    - 3.5.13.3 Mode Select Switch
    - 3.5.13.4 Lead Pump Selector Switch
    - 3.5.13.5 PCP Temperature Alarm
- 3.6 OPERATING PROGRAM REQUIREMENTS
- 3.7 AUTOMATIC MODE - IDLE CONDITION (GOOD JOCKEY PUMP)
- 3.8 AUTOMATIC MODE - IDLE CONDITION (FAILED JOCKEY PUMP)
- 3.9 AUTOMATIC MODE - REFUELING CONDITION
- 3.10 RE-FUELING MODE - REFUELING CONDITION
- 3.11 LOOP FLUSH MODE
- 3.12 PANTOGRAPH FLUSH MODE
- 3.13 TIGHTNESS TEST MODE
- 3.14 OFF MODE
- 3.15 MANUAL OPERATION OF FUELING PUMPS
- 3.16 4-VALVE MANIFOLD SUPERVISION

-- End of Section Table of Contents --

\*\*\*\*\*  
USACE / NAVFAC / AFCEC UFGS-33 09 54 (August 2018)

Preparing Activity: USACE

-----  
Superseding  
UFGS-33 09 54 (February 2010)

## UNIFIED FACILITIES GUIDE SPECIFICATIONS

References are in agreement with UMRL dated April 2025

\*\*\*\*\*

### SECTION 33 09 54

AVIATION FUEL PUMP CONTROL AND ANNUNCIATION SYSTEM (TYPE [IV][V])  
08/18

\*\*\*\*\*

NOTE: This guide specification covers the requirements for the Pump Control and Annunciation System for aircraft refueling systems constructed to the requirements of the DOD Type IV or V Direct Aircraft Refueling System Standards.

Adhere to UFC 1-300-02 Unified Facilities Guide Specifications (UFGS) Format Standard when editing this guide specification or preparing new project specification sections. Edit this guide specification for project specific requirements by adding, deleting, or revising text. For bracketed items, choose applicable item(s) or insert appropriate information.

Remove information and requirements not required in respective project, whether or not brackets are present.

Comments, suggestions and recommended changes for this guide specification are welcome and should be submitted as a Criteria Change Request (CCR).

\*\*\*\*\*

## PART 1 GENERAL

\*\*\*\*\*

NOTE: NOTE: DoD Type III systems must conform to Standard Design AW 078-24-28 PRESSURIZED HYDRANT FUELING SYSTEM TYPE III. DoD Type IV/V systems must conform to Standard Design AW 078-24-29 PRESSURIZED HYDRANT DIRECT FUELING SYSTEM TYPE IV/V. Cut and Cover systems must conform to Standard Design AW 078-24-33 UNDERGROUND VERTICAL STORAGE TANKS CUT AND COVER. Field fabricated ASTs must conform to AW 078-24-27 ABOVEGROUND VERTICAL STEEL TANKS WITH FIXED ROOFS. Standards can be found on the Whole Building Design Guide at the following location <https://www.wbdg.org/ffc/dod/non-cos-standards>.

Subject Matter Expert (SME) is defined as Service Headquarters Subject Matter Experts: Air Force - The Air Force Fuels Facilities Subject Matter Expert (HQ AFCEC/COS), Army - Headquarters, U.S. Army Corps of Engineers, POL-MCX Facilities Proponent (CECW-EC) through the Army Petroleum Center (APC), Navy/Marine Corps - NAVFAC POL Facility Subject Matter Expert (NAVFAC EXWC, CI11).

\*\*\*\*\*

## 1.1 SYSTEM OVERVIEW

The [Aircraft Direct Fueling System] [Aircraft In-Shelter Fueling System] consists of fueling pumps that pump fuel to pantograph type fueling stations located [on the airfield apron.] [in Aircraft Shelters.] [Using Scheme A, the lead pump is started manually by the start/stop station located at the fueling station. The other pump is started and stopped automatically by the PCP.] [Using Scheme B, all pumps are started and stopped automatically by the PCP.] Automatic pump starts and stops are based on system pressure and flow. Programmable Logic Controllers (PLCs) receive information from pressure transmitters and other devices to control the pumps and control valves. There are two PLCs that are connected in a redundant configuration, to assure continued operation of the Aircraft Fueling System even if either PLC (but not both) fails. The [Aircraft Direct Fueling System][Aircraft In-Shelter Fueling System] also includes [above ground fuel storage tanks] [cut-n-cover type fuel storage tanks] and a product recovery tank. The pump control panel, personal computer and annunciator are located in the Control Room of the [Pumphouse.][Filter Separator Building.]

## 1.2 GENERAL REQUIREMENTS

Section 26 20 00 INTERIOR DISTRIBUTION SYSTEM applies to this section, with the additions and modifications specified herein. The control system must be furnished by a single supplier. See specification 33 52 43.11 AVIATION FUEL MECHANICAL EQUIPMENT for other required components of the control system. The control system supplier must be responsible for providing a fully functional control system, in accordance with the drawings and specifications, including the field devices. Installation must be in accordance with NFPA 70.

Subject Matter Expert (SME) is defined as Service Headquarters Subject Matter Experts. SME for this project is [Air Force - The Air Force Fuels Facilities Subject Matter Expert (HQ AFCEC/COS)][Army - Headquarters, U.S. Army Corps of Engineers, POL-MCX Facilities Proponent (CECW-EC) through the Army Petroleum Center (APC)][Navy/Marine Corps - NAVFAC POL Facility Subject Matter Expert (NAVFAC EXWC, CI11)].

## 1.3 REFERENCES

\*\*\*\*\*

NOTE: This paragraph is used to list the publications cited in the text of the guide specification. The publications are referred to in the text by basic designation only and listed in this paragraph by organization, designation, date, and title.

Use the Reference Wizard's Check Reference feature when you add a RID outside of the Section's Reference Article to automatically place the reference in the Reference Article. Also use the Reference Wizard's Check Reference feature to update the issue dates.

References not used in the text will automatically be deleted from this section of the project specification when you choose to reconcile references in the publish print process.

\*\*\*\*\*

The publications listed below form a part of this specification to the extent referenced. The publications are referred to in the text by basic designation only.

INSTITUTE OF ELECTRICAL AND ELECTRONICS ENGINEERS (IEEE)

- |             |   |
|-------------|---|
| IEEE C37.90 | (2005; R 2011) Standard for Relays and Relay Systems Associated With Electric Power Apparatus |
| IEEE C62.41 | (1991; R 1995) Recommended Practice on Surge Voltages in Low-Voltage AC Power Circuits        |

INTERNATIONAL SOCIETY OF AUTOMATION (ISA)

- |          |   |
|----------|---|
| ISA 18.1 | (2024) Annunciator Sequences and Specifications |
|----------|---|

NATIONAL ELECTRICAL MANUFACTURERS ASSOCIATION (NEMA)

- |            |  |
|------------|--|
| NEMA 250   | (2020) Enclosures for Electrical Equipment (1000 Volts Maximum)  |
| NEMA IA 2  | (2005) Programmable Controllers - Parts 1 thru 8   |
| NEMA ICS 1 | (2022) Standard for Industrial Control and Systems: General Requirements                               |
| NEMA ICS 2 | (2000; R 2020) Industrial Control and Systems Controllers, Contactors, and Overload Relays Rated 600 V |
| NEMA ICS 4 | (2015) Application Guideline for Terminal Blocks   |
| NEMA ICS 6 | (1993; R 2016) Industrial Control and Systems: Enclosures  |

NATIONAL FIRE PROTECTION ASSOCIATION (NFPA)

- |         |  |
|---------|--|
| NFPA 70 | (2023; ERTA 1 2024; TIA 24-1) National Electrical Code |
|---------|--|

U.S. FEDERAL COMMUNICATIONS COMMISSION (FCC)

FCC Part 15

Radio Frequency Devices (47 CFR 15)

UL SOLUTIONS (UL)

UL 508

(2018; Reprint Jul 2021) UL Standard for Safety Industrial Control Equipment

UL 1012

(2010; Reprint Apr 2016; Rev Mar 2021) UL Standard for Safety Power Units Other than Class 2

UL 1449

(2021; Reprint Dec 2022) UL Standard for Safety Surge Protective Devices

1.4 SUBMITTALS

\*\*\*\*\*

NOTE: Review submittal description (SD) definitions in Section 01 33 00 SUBMITTAL PROCEDURES and edit the following list, and corresponding submittal items in the text, to reflect only the submittals required for the project. The Guide Specification technical editors have classified those items that require Government approval, due to their complexity or criticality, with a "G." Generally, other submittal items can be reviewed by the Contractor's Quality Control System. Only add a "G" to an item, if the submittal is sufficiently important or complex in context of the project.

For Army projects, fill in the empty brackets following the "G" classification, with a code of up to three characters to indicate the approving authority. Codes for Army projects using the Resident Management System (RMS) are: "AE" for Architect-Engineer; "DO" for District Office (Engineering Division or other organization in the District Office); "AO" for Area Office; "RO" for Resident Office; and "PO" for Project Office. Codes following the "G" typically are not used for Navy and Air Force projects.

The "S" classification indicates submittals required as proof of compliance for sustainability Guiding Principles Validation or Third Party Certification and as described in Section 01 33 00 SUBMITTAL PROCEDURES.

\*\*\*\*\*

Government approval is required for submittals with a "G" or "S" classification. Submittals not having a "G" or "S" classification are for Contractor Quality Control approval. Submittals not having a "G" or "S" classification are for information only. When used, a code following the "G" classification identifies the office that will review the submittal for the Government. Submit the following in accordance with Section 01 33 00 SUBMITTAL PROCEDURES:

#### SD-02 Shop Drawings

Shop Drawing; G, [[\_\_\_\_]].

#### SD-03 Product Data

Pump Control Panel (PCP) and Components; G, [[\_\_\_\_]].

Programmable Logical Controller (PLC) Hardware and Software; G, [[\_\_\_\_]].

Personal Computer (PC); G, [[\_\_\_\_]].

Laptop Computer; G, [[\_\_\_\_]].

FCC Computer; G, [[\_\_\_\_]].

Printer; G, [[\_\_\_\_]].

Graphics Display Screen; G, [[\_\_\_\_]].

Control Wiring Data Lists; G, [[\_\_\_\_]].

#### SD-06 Test Reports

Testing Plan; G, [[\_\_\_\_]].

Certified Pump Control Panel (PCP) Shop Test Report.

Record of Test.

#### SD-07 Certificates

Experience and Qualifications; G, [[\_\_\_\_]].

#### SD-10 Operation and Maintenance Data

Plan for Instructing Personnel; G, [[\_\_\_\_]].

Operation and Maintenance Manuals; G, [[\_\_\_\_]].

Tools and Spare Parts.

### 1.5 OPERATION AND MAINTENANCE MANUALS

#### 1.5.1 Schedule and Content

Submit copies of operational and maintenance manuals, within 7 calendar days following the completion of factory tests. As a minimum, include the following in the manuals:

- a. Pump Control Panel including interior and exterior equipment layout.
- b. All documents previously submitted and approved with all comments and field changes annotated.
- c. Complete description of the sequence of operation including that described in PART 3 and any subsystems not controlled by the PLC (e.g.



annunciator panel, EPDS, etc.)

- d. Complete listing of all programming of the PLCs, laptop computer, and Personal Computer.
- e. Complete relay ladder logic diagrams, PLC input/output diagrams and control power distribution diagrams for the complete control system.
- f. Complete guide outlining step-by-step procedures for system startup and operation.
- g. Complete troubleshooting guide, which lists possible operational problems and corrective action to be taken.
- h. Complete maintenance and installation manual for all equipment supplied.
- i. Spare parts data, which provides supplier name, current cost, catalog order number, and a recommended list of spare parts to be stocked.
- j. The above must incorporate all as-built conditions.

#### 1.5.2 Assembly

For hard copy submittals, bind documents in a suitable binder adequately marked or identified on the spine and front cover. Include a table of contents page and mark with pertinent contract information and contents of the manual. Provide tabs to separate different types of documents, such as catalog ordering information, drawings, instructions, and spare parts data. Index sheets must be provided for each section of the manual when warranted by the quantity of documents included under separate tabs or dividers. Provide electronic copy, Adobe Acrobat 11.0 or later, of documents with bookmarks.

#### 1.6 TOOLS AND SPARE PARTS

Provide the following:

- a. Any special tools necessary for maintenance of the equipment
- b. One spare set of fuses of each type and size
- c. Recommended manufacturer list of spare parts. Include part number, current unit price, and source of supply.
- d. One spare power supply module
- e. One spare I/O module (for discrete devices)
- f. One spare I/O module (for analog devices)
- g. Two PLC RAM back-up batteries
- h. Two complete sets of ink cartridges for the laser printer
- i. Minimum of ten spare lamps for the Alarm Annunciator
- j. Minimum of ten spare lamps of each type of non-LED lamps used on the Pump Control Panel

[ k. [\_\_\_\_\_] ]

#### 1.7 EXPERIENCE AND QUALIFICATIONS

Submit the following data for approval:

- a. Certification stating that the manufacturer has manufactured, installed, and successfully completed at least three PLC-based systems for automatic cycling of pumps based upon varying dispensing demands ranging from 0 to 150 L/s 2400 gallons per minute utilizing multiple pumps. At least one of the three PLC-based systems must be for dispensing jet fuel into a pressurized, constant pressure, flow demand aircraft hydrant system.
- b. Certification that the proposed control systems have successfully operated over the last 2 years and are currently in service.
- c. Project names, locations, and system description of these installations. Include user point-of-contact and current telephone numbers.

#### 1.8 WARRANTY

Warrant the Pump Control and Annunciation System including devices, hardware and software for a period of 1 year from the date of acceptance of the system by the Government. This warranty service must include parts and labor service for equipment supplied under this specification. Upon notification by the Government of system or component failure, respond at the site with necessary parts within 48 hours of notification.

### PART 2 PRODUCTS

#### 2.1 PUMP CONTROL PANEL (PCP) AND COMPONENTS

##### 2.1.1 Enclosure

NEMA ICS 1, NEMA ICS 6, NEMA 250, and UL 508. The PCP enclosure must be a freestanding NEMA Type 12, smooth, gasketed enclosure constructed of 12 gauge steel. All seams must be continuously welded and there must be no drilled holes or knockout prior to delivery to the job site. The pump control panel dimensions must be a maximum of 2290 mm 90 inches high, maximum 1830 mm 72 inches wide, and a maximum of 610 mm 24 inches deep and must have removable lifting eyes. The interior surfaces of the panel must be properly cleaned, primed, and spray painted with white high-gloss enamel. Exterior surfaces must have standard factory finish. Access for the PCP must be front only and must consist of hinged doors having 3-point latching mechanisms. The doors must open approximately 120 degrees. Rack mounting angles, swing-out panels and other component mounting hardware must be installed such that servicing of one component must not require removal or disconnection of other components. No clearance must be required between the back of the panel and the room walls. Terminal facilities must be arranged for entrance of external conductors from the top or bottom of the enclosure.

##### 2.1.2 Ventilation System

Two supply fans, single phase, 115 volt, must be provided. Each fan must supply a minimum of 2.8 cubic meters/minute 100 CFM. The supply and

exhaust grill must contain a filter that is easily removed from the exterior of the enclosure. Three thermostats with an adjustable set point range of 70 degrees F 21 degrees C to 140 degrees F 60 degrees C must also be provided. The thermostats must be located near the top in the interior of the PCP.

#### 2.1.1.3 Ground Bar

The control panel must have a tin plated copper equipment ground bar. The bar must have a minimum of twenty grounding screws.

#### 2.1.1.4 Standard Indicator Lights

NEMA ICS 1, NEMA ICS 2, and UL 508. Lights must be heavy duty, NEMA 13, 22.5 mm mounting hole, round indicating lights operating at 120 volts ac/dc or 24 volts ac/dc. Long life bulbs must be used. Indicator lights must have a legend plate with words as shown on drawings. Lens color as indicated on the drawings. Lights must be "push to test (lamp)" type. LED type lamps of comparable size and color may be substituted for standard indicator lights.

#### 2.1.1.5 Selector Switches

NEMA ICS 1, NEMA ICS 2, and UL 508. Non-illuminated lever operated selector switches must be heavy duty, NEMA 13, round, and utilize a 22 mm 7/8-inch mounting hole. They must have the number of positions as indicated on the drawings. Switches must be rated 600 volt, 10 amperes continuous. Legend plates must be provided with each switch with words as indicated on the drawings.

#### 2.1.1.6 Pushbuttons

NEMA ICS 1, NEMA ICS 2, and UL 508. Non-illuminated pushbuttons must be heavy duty, NEMA 13, round, utilize a 22 mm 7/8 inch mounting hole, and have the number and type of contacts as indicated on the drawings or elsewhere in the specifications. The emergency stop switch must be a red mushroom head, 38 mm 1.5 inch diameter, momentary contact type. Pushbuttons must be rated 600 volt, 10 amperes continuous. Provide legend plates with each switch with words as indicated on the drawings.

#### 2.1.1.7 Relays

IEEE C37.90, NEMA ICS 2, UL 508.

#### 2.1.1.8 Nameplates

Provide laminated plastic nameplates with black outer layers and a white core. Edges must be chamfered. Fasten the nameplates with black-finished round-head drive screws or approved nonadhesive metal fasteners.

#### 2.1.1.9 Transient Voltage Surge Suppression Devices

IEEE C62.41 for Category "B" transients, UL 1449.

#### 2.1.1.10 Terminal Blocks

NEMA ICS 4. Terminal blocks for conductors exiting the PCP must be two-way type with double terminals, one for internal wiring connections and the other for external wiring connections. Terminal blocks must be made of

bakelite or other suitable insulating material with full deep barriers between each pair of terminals. A terminal identification strip must form part of the terminal block and each terminal must be identified by a number in accordance with the numbering scheme on the approved wiring diagrams.

#### 2.1.11 Circuit Breakers

**UL 508.** Provide individual, appropriately sized, terminal block mounted, circuit breakers for all 120 volt PCP mounted equipment and for the 120 volt terminal boards shown on the drawings.

#### 2.1.12 Uninterruptible Power Supplies

**UL 1012.** Input voltage must be 120 volts (nominal), 1 phase, 60 Hertz. Output voltage regulation must be +/-5.0 percent for the following conditions:

- a. 20 percent to 100 percent load on output.
- b. Input voltage variation of -15 percent to +10 percent.
- c. Constant load power factor between 80 percent and 100 percent.

Response time must be 1.5 cycles or less. Battery capacity must be such as to provide an orderly shut down of operating programs or as a minimum 30 minutes.

#### 2.1.13 Miscellaneous Power Supplies

**UL 1012.** Certain field devices may require power other than 120VAC (i.e. 24VDC). The power supplies must be convection cooled, have fully isolated independent outputs, have constant voltage, have short circuit and overvoltage protection, and have automatic current limiting.

#### 2.1.14 Alarm Annunciator

**UL 508** and **ISA 18.1.** The Alarm Annunciator must provide visual annunciation, local and remote monitoring, constant or flashing visual and audible alarm as specified herein. The annunciator must be completely solid state with no moving parts. Furnish the annunciator with cabinet and hardware appropriate for flush mounting on the control panel. A power supply either integral or separately mounted must operate on 120 volts, 60 Hertz. The annunciator must have windows arranged in a matrix configuration (rows and columns). Each window must be at least 25 mm 1 inch high by 40 mm 1-5/8 inches wide and must have rear illuminated translucent engraved nameplate. Lettering must be at least 4 mm 5/32 inches high. System lamp voltage must be 24 to 28 volts dc.

#### 2.1.15 Alarm Horns

**UL 508.** The alarm horns must consist of 2-vibrating horns and 1-resonating horn. One vibrating horn is to be mounted in the PCP, and one vibrating and one resonating horn must be mounted outside of the control room as shown on the drawings. The exterior horns must each produce 100db at 3 m 10 feet and must be provided in a weather proof housing. The PCP horn must produce 70db at 3 meters 10 feet.

#### 2.1.16 Laptop Computer

##### 2.1.16.1 Hardware

The following are the minimum hardware requirements for the laptop computer:

- a. Latest Pentium CPU operating at 2 GHz or faster
- b. 2 GB RAM
- c. 500 GB hard drive
- d. 16X Read-Write DVD drive
- e. Color LCD screen 360 mm 14 inches
- f. Keyboard
- g. Pointing device (e.g. mouse)
- h. Parallel communication port
- i. Serial communication port compatible with PLC (e.g. RS-232-C, RS-485)
- j. 120VAC and Battery power supply
- k. All cables and connectors for interfacing with PLC and personal computer
- l. Modem compatible for remote troubleshooting of the system
- m. Two USB 2.0 communications ports
- n. Provide a carrying case for the Laptop Computer

##### 2.1.16.2 Software

The following is the minimum software to be loaded on the laptop. The software must be the most current versions and compatible with each other to make a complete and usable system. All software needs to be fully site licensed and come with all disks to allow a full restore or reload of software in the event of a hard drive crash.

- a. Operating system (e.g. the latest commercially available MS Operating System)
- b. Software for programming the PLC
- c. Software for programming the personal computer

#### 2.1.17 Personal Computer (PC)

##### 2.1.17.1 Hardware

The following are the minimum hardware requirements for the personal computer:

- a. Latest Pentium CPU operating at 2.4 GHz or faster
- b. 4 GB RAM
- c. 500 GB hard drive
- d. 16X Read-Write DVD drive
- e. Color 610 mm 24 inches flat screen monitor
- f. Keyboard
- g. Pointing device (e.g. mouse)
- h. Parallel communication port
- i. Serial communication port compatible with PLC (e.g. RS-232-C, RS-485)
- j. 120VAC operating power
- k. All cables and connectors for interfacing with PLC and Laser Printer
- l. Provide a modem capable of remote troubleshooting of the system. The modem will not be permanently connected to the System.
- m. Two USB 2.0 communications ports

#### 2.1.17.2 Software

The following is the minimum software to be loaded on the personal computer. The software must be the most current versions and compatible with each other to make a complete and usable system. All software must be fully site licensed and come with all disks to allow a full restore or reload of software in the event of a hard drive crash.

- a. Operating system (e.g. the latest commercially available MS Operating System)
- b. Software for programming the PLCs
- c. The personal computer must communicate with the PLCs to display system status and change system set points. The personal computer must have run-time graphical software to display the graphical screens described later and to change set points.
- d. Software for recording, tracking, trending, and printing out the pressures, flows, and operational status of all monitored components of the fueling system on a real time basis.
- e. MS Office Professional with Excel must be provided to allow the trending data described above to be imported to Excel where it can be studied, manipulated, graphed, and easily sent electronically.

#### 2.1.18 Printer

The alarm/report printer must be a color laser jet printer. The unit must print in black at a minimum speed of twelve pages per minute. It must print in color at a minimum speed of ten pages per minute. It must as a minimum be capable of printing color graphs of various system pressures, issue flow, and return flow vs. time in seven colors. Provide one set of spare replacement ink cartridges.

#### 2.1.19 FCC Computer

##### 2.1.19.1 Hardware

The FCC computer must be a copy of the personal computer so that upon failure of the personal computer it could be relocated to the pumphouse to assume the personal computers duties. The normal duties of the FCC computer must be to serve as a remote monitor only of the screens that are available on the personal computer. The following are the minimum hardware requirements for the FCC computer:

- a. Latest Pentium CPU operating at 2.4 GHZ or faster
- b. 2 GB RAM
- c. 250 GB hard drive
- d. 16X Read-Write DVD drive
- e. Color 430 mm 17 inches flat screen monitor
- f. Keyboard
- g. Pointing device (e.g. mouse)
- h. Parallel communication port
- i. Serial communication port compatible with PLC (e.g. RS-232-C, RS-485)
- j. 120VAC operating power
- k. All cables and connectors for interfacing with PLC and Laser Printer

- l. Provide a modem capable of remote troubleshooting of the system. The modem will not be permanently connected to the System.
- m. Two USB 2.0 communications ports

#### 2.1.19.2 Software

The following is the minimum software to be loaded on the FCC computer. The FCC computer must be capable of replacing the Personal computer in the pumphouse if the personal computer fails. It will be set up initially to serve only as a remote monitor of the system while located at the FCC. Should the personal computer fail, the FCC computer will be relocated to the pumphouse and then assume the role of the personal computer. The computer software must have a built in command to tell the computer whether it is serving as the personal computer or as the remote monitor only. The software must be the most current versions and compatible with each other to make a complete and usable system.

- a. Operating system (e.g. the latest commercially available MS Operating System)
- b. Software to tell the computer which mode it is to operate in, i.e. (personal computer or remote monitor)
- c. Software to run as a remote monitor
- d. Software for programming the PLCs
- e. The personal computer must communicate with the PLCs to display system status and change system set points. The personal computer must have run-time graphical software to display the graphical screens described later and to change set points.
- f. Software for recording, tracking, trending, and printing out the pressures, flows, and operational status of all monitored components of the fueling system, on a real time basis.
- g. MS Office Professional with Excel must be provided to allow the trending data described in e. above to be imported to Excel where it can be studied, manipulated, graphed, and easily sent electronically.

### 2.2 PROGRAMMABLE LOGICAL CONTROLLER (PLC) HARDWARE AND SOFTWARE

#### 2.2.1 General

- a. **NEMA IA 2**. Each PLC must be able to receive discrete and analog inputs and through its programming it must control discrete and analog output functions, perform data handling operations and communicate with external devices and remote I/O racks. The PLCs must be a modular, field expandable design allowing the system to be tailored to the process control application. The capability must exist to allow for expansion to the system by the addition of hardware and/or user software. At a minimum the PLCs must include mounting backplanes, power supply modules, CPU module, communication modules, and I/O modules.
- b. Each PLC provided must be designed and tested for use in the high electrical noise environment of an industrial plant. The PLC modules must comply with the **FCC Part 15** Part A for radio noise emissions. The programmable controller processor must be able to withstand conducted

susceptibility tests as outlined in NEMA ICS 2, IEEE C37.90.

- c. The PLCs must function properly at temperatures between 0 and 50 degrees C 32 and 122 degrees F, at 5 to 95 percent relative humidity non-condensing and have storage temperatures between -40 and 60 degrees C -40 and +140 degrees F at 5 to 95 percent relative humidity non-condensing.
- d. The PLCs must have manufacturer's standard system status indicators (e.g. power supply status, system fault, run mode status, back-up battery status).

#### 2.2.2 Central Processing Unit Module

The CPU must be a modular self-contained unit that provides time of day, scanning, application (ladder rung logic) program execution, storage of the application program, storage of numerical values related to the application process and logic, I/O bus traffic control, peripheral and external device communications and self-diagnostics.

#### 2.2.3 Power Supply Module

- a. The power supply module must be plugged into the backplane not separately mounted. The power supply must be wired to utilize 120 VAC, 60 Hz power, the system must function properly within the range of -10 percent to +15 percent of nominal voltage. The power supply must provide an output to the backplane at a wattage and voltage necessary to support the attached modules. A single main power supply module must have the capability of supplying power to the CPU module and local communication and I/O modules. Auxiliary power supplies must provide power to remote racks.
- b. Each power supply must have an integral on/off disconnect switch to the module. If the manufacturers standard power supply does not have an on/off disconnect switch a miniature toggle type switch must be installed near the PLC and clearly labeled as to its function.
- c. The power supply must monitor the incoming AC line voltage for proper levels and have provisions for both over current and over voltage protection. If the voltage level is detected as being out of range the system must have adequate time to complete a safe and orderly shutdown.

#### 2.2.4 Program Storage/Memory Requirements

- a. The PLC must have the manufacturers standard nonvolatile executive memory for the operating system. The PLC must also have EEPROM (Electrically Erasable Programmable Read Only Memory) for storage of the user program and battery backup RAM for application memory. The EEPROM must be loaded by use of the laptop computer or the personal computer.
- b. Submit a calculation of the required amount of EEPROM and RAM (random access memory) needed for this application plus an extra 50 percent.
- c. The number of times a normally open (N.O.) and/or normally closed (N.C.) contact of an internal output can be programmed must be limited only by the memory capacity to store these instructions.



#### 2.2.5 Input/Output (I/O) Modules

- a. Provide all required I/O modules (analog input, analog output, discrete input, discrete output, and isolated discrete output) to manipulate the types of inputs and outputs as shown on the drawings and to comply with the sequence of operations. Also provide a minimum of 20 percent (round up for calculation) spare input and output points of each type provided, but not less than two of each type.
- b. I/O modules must be a self-contained unit housed within an enclosure to facilitate easy replacement. All user wiring to I/O modules must be through a heavy-duty terminal strip. Pressure-type screw terminals must be used to provide fast, secure wire connections. The terminal block must be removable so it is possible to replace any input or output module without disturbing field wiring.
- c. During normal operation, a malfunction in any remote input/output channel must affect the operation of only that channel and not the operation of the CPU or any other channel.
- d. Isolation must be used between all internal logic and external power circuits. This isolation must meet the minimum specification of 1500 VRMS. Provide optically isolated I/O components which are compatible with field devices.
- e. Each I/O module must contain visual indicators to display ON/OFF status of individual input or output points.
- f. Discrete output modules must be provided with self-contained fuses for overload and short circuit protection of the module.
- g. All input/output modules must be color coded and titled with a distinctive label.

#### 2.2.6 Interfacing

The PLC must have communication ports and communication modules using the manufacturers standard communication architecture for connections of the Personal computer, Laptop Computer, remote I/O racks and interconnections between SYS 1 PLC and SYS 2 PLC for the redundant backup system of the PLCs.

#### 2.2.7 Program Requirements

- a. The programming format must be ladder diagram type as defined by **NEMA IA 2**.
- b. There must be a means to indicate contact or output status of the contact or output on the CRT (of the personal computer) or LCD screen (of the laptop computer). Each element's status must be shown independently, regardless of circuit configuration.
- c. The program must be full featured in its editing capabilities (e.g. change a contact from normally open to normally closed, add instructions, change addresses, etc.).

#### 2.2.8 Diagnostics

The CPU must continuously perform self-diagnostic routines that will

provide information on the configuration and status of the CPU, memory, communications and I/O. The diagnostic routines must be regularly performed during normal system operation. A portion of the scan time of the controller should be dedicated to perform these housekeeping functions. In addition, a more extensive diagnostic routine should be performed at power up and during normal system shutdown. The CPU must log I/O and system faults in fault tables, which must be accessible for display. When a fault shuts down a CPU, a sequence must be initiated that will automatically switch over to the other CPU. When a fault affects I/O or communication modules the CPU must shut down only the hardware affected and continue operation by utilizing healthy system components. All faults must be annunciated on the alarm annunciator.

## PART 3 EXECUTION

### 3.1 PUMP CONTROL PANEL (PCP) AND COMPONENTS

#### 3.1.1 General

- a. Where two or more pieces of equipment performing the same function are required, they must be exact duplicates produced by the same manufacturer. All display instruments of each type must represent the same outward appearance, having the same physical size and shape, and the same size and style of numbers, characters, pointers, and lamp lenses.
- b. The PCP must include all required resident software programs and hardware to provide the specified sequence of operation. All software optical disks including programming manuals must be turned over to the Government at the completion of start-up so modification can be done in the field with no outside assistance.
- c. It is intended that process controlling devices except field devices, and motor controllers be attached to or mounted within the PCP enclosure and all interconnecting wiring installed prior to shipment to the job site. This is to allow shop testing of the system and to decrease field labor requirements.
- d. The PCP must be shipped fully assembled in one piece after the completion of the shop tests and all defects corrected.

#### 3.1.2 Wiring

##### 3.1.2.1 Methods and Practices

Wiring methods and practices must be in conformance with NEMA ICS 1, NEMA ICS 2, NEMA ICS 4 and NEMA ICS 6 recommendations as applicable. All wiring to instruments and control devices must be made with stranded wire, and wiring must be permanently labeled with conductor/wire numbers within 25 mm 1 inch of termination points. Labels must be tubular heat-shrinkable wire markers that remain legible after exposure to industrial fluids and abrasion. Position markers so that wire numbers can be read without disturbing or disconnecting wiring. Use of individual character-markers placed side-by-side is not acceptable. Numbers must match approved shop drawings. All wiring must be neatly laced from point of entry into enclosures to termination points with nylon lacing cord or plastic lacing ties. Lacing within wiring channels is not required.

#### 3.1.2.2 Control Wiring Data Lists

Provide typed Control Wiring Data Lists within each terminal cabinet and the PCP. The data lists must include: conductor identification number, wire gauge, wire insulation type, "FROM" terminal identification, "TO" terminal identification, and remarks. Submit the preliminary lists and update to As-Built conditions.

#### 3.1.3 Certified Pump Control Panel (PCP) Shop Test Report

The manufacturer must shop test the PCP, Personal computer, and lap top computer. Include simulation of field components and provide for fully testing the pump control and annunciator system as a unit before delivery to the project site. The test must, reveal system defects, including, but not limited to, functional deficiencies, operating program deficiencies, algorithm errors, timing problems, wiring errors, loose connections, short circuits, failed components and misapplication of components. Perform the test prior to shipment to the site and correct problems detected. Repeat the final testing and correction sequence until no problems are revealed and then perform two additional successful tests. Submit certified test report within 15 days after completion of the test. The report must include a statement that the Pump Control Panel performs as specified. Notify the Governments Contracting Officer and the SME 30 days prior to the final shop testing date. The Contracting Officer may require a Government witness at the final test before the PCP is shipped to the site.

#### 3.1.4 Ventilation System

Thermostat T-1, must control fan F-1 and thermostat T-2 must control fan F-2. T-1 and T-2 must be set at 27 degrees C 80 degrees F to maintain interior air temperature to 11 degrees C 20 degrees F above ambient. Thermostat T-3, set at 38 degrees C 100 degrees F, must provide a non-critical PCP HIGH TEMPERATURE alarm to the alarm annunciator.

#### 3.1.5 Grounding

Connect the PCP ground bar to the building counterpoise via a #10 AWG conductor. Within the enclosure all I/O racks, processor racks, and power supplies, etc. must be grounded to meet the manufacturer's specifications.

#### 3.1.6 Indicator Lights, Switches, and Pushbuttons

Mount indicator lights, switches, and pushbuttons through the PCP enclosure and arrange to allow easy vision and operation of each device. Provide each device with a nameplate and/or legend plate as indicated on the drawings. Nameplate wordings must be as indicated on the drawings.

#### 3.1.7 Transient Voltage Surge Suppression Devices

Transient voltage surge suppression (TVSS) devices must be installed in the PCP to minimize effects of nearby lightning strikes, switching on and off of motors and other inductive loads. TVSS must be provided for each control circuit ladder. Each ladder may contain any combination of the following devices: PLCs, power supplies (e.g., 24 volt), fans, relays, lights, switches etc. TVSS must also be provided for PLC I/O originating outside of the building.

#### 3.1.8 Terminal Blocks

As a minimum, any PCP device that connects to a field device (devices not located in the PCP) must be connected to a terminal block. A connection diagram similar to the drawings must be provided to the field contractor for field connections to the PCP.

#### 3.1.9 Circuit Breakers

As a minimum, any 120 volt PCP device i.e. (fans, lights, power receptacles, 24 VDC power supplies, PLC CPUs, PLC I/O racks) must be provided with an individual circuit breaker. Additionally 120 volt terminal boards connecting to field devices (devices not located in the PCP) must be protected by a 120 volt circuit breaker.

#### 3.1.10 Uninterruptible Power supplies

The Pump Control Panel (PCP) must contain three uninterruptible power supplies (UPS) each connected to a dedicated circuit. As shown on the drawings one UPS must supply PLC System 1, one UPS must supply PLC System 2, and the third UPS must supply the miscellaneous device power. The UPSs output capacity must be sufficient to drive all the equipment connected plus 25 percent. The UPSs must be mounted on shelves near the bottom of the PCP but not rest on the floor of the PCP.

#### 3.1.11 Power Supplies

Provide and install all 120VAC and 24VDC power supplies as required. Size the power supplies for the load plus 25 percent. Supply all field devices, which require power and are controlled or monitored from the PCP, from power supplies in the pump control panel. Provide a 120V receptacle in the PCP for use by the Laptop computer. Completely install interconnecting wiring between UPSs and PLC power supplies prior to shipment to the job site.

#### 3.1.12 Alarm Annunciator and Horns

Initiate signals by hardwired field contacts or by PCP outputs as required. The annunciator must energize alarm horns, both an integral panel mounted vibrating horn and remote horns, and flash the appropriate annunciator lamp. The minimum number of windows must correspond to the number of alarm points, plus 15 percent spare. The drawings indicate panel layout and the alarms to be annunciated.

##### 3.1.12.1 Non-critical Alarms

Non-critical alarm windows must be white with black lettering and must sound the PCP mounted vibrating horn and the exterior mounted vibrating horns.

##### 3.1.12.2 Critical Alarms

Critical alarm windows must be red with white lettering and must sound the PCP mounted vibrating horn and the exterior mounted resonating horns. Critical alarms must also cancel all automatic pump starts in the PLC.

##### 3.1.12.3 Alarm Sequence

Alarm sequence for each alarm must be as follows (ISA 18.1 sequence 'A').

- a. For a normal condition, visual indicator and horns will be off.
- b. For an alarm condition, visual indicator will flash and horns will sound (this condition will be locked in).
- c. Upon acknowledgment of the alarm condition, visual indicator will be steady on and the horns will be off.
- d. If, after acknowledgment of an alarm condition, another alarm condition is established, the new alarm will cause the appropriate window to flash and the horn to sound.
- e. When condition returns to normal after acknowledgment, the visual indicator and the horn will be off.

### 3.1.13 Personal Computer

The personal computer must be a stand alone, desk top mounted unit. The personal computer must download system parameters from the PLCs for display. The personal computer must also upload new set point values that the operator has changed using the personal computer keyboard, after a password has been entered.

#### 3.1.13.1 Screen Number 1

The general opening screen must as a minimum display the name and location of the installation (e.g. Seymour Johnson Air Force Base, North Carolina), name of the project (e.g., Type III Hydrant Fueling System) and screen navigation information.

\*\*\*\*\*  
**NOTE: Include items below that are appropriate to  
the operating scheme (A or B) chosen.**  
\*\*\*\*\*

#### 3.1.13.2 Screen Number 2

At a minimum display the following items. Continuously update the values; a 2 second delay maximum between updates is acceptable.

System Issue Rate	xxxx L/sGPM
System Return Rate	xxxx L/sGPM
System Net Flow	xxxx L/sGPM
System Pressure	xxxx kPaPSI
System Operation Mode	Auto/Off/Flush/Tightness test

Active System	Sys-1/Sys-2
Lead Pump	1/2/3
Fuel Pump #1	On/Off       xxxxx.x HOURS
Fuel Pump #2	On/Off       xxxxx.x HOURS
Fuel Pump #3	On/Off       xxxxx.x HOURS
Backpressure Control Valve	[Closed/]Enabled/OPEN
[Pressure Control Valve	Closed/Enabled]
Flush Valve	Closed/Defuel
Tank 1 Outlet Valve	Open/Closed
Tank 2 Outlet Valve	Open/Closed
Tank 1 Receipt Valve	Open/Closed
Tank 2 Receipt Valve	Open/Closed
Receipt Bypass Valve	Open/Closed
Manifold Setup Valve I34	Open/Closed
Manifold Setup Valve I35	Open/Closed
Manifold Setup Valve R10	Open/Closed
Manifold Setup Valve R11	Open/Closed
Only one of the words separated by a slash (/) must be displayed. The xxxxx.x HOURS is the fuel pumps elapsed run time and the value must not be lost when the lead PLC is switched. The pump and valve status words must be color coded to match the colors used on the graphic display screen.	

### 3.1.13.3 Screen Number 3

The following table must be displayed. The table lists the set points that can be adjusted using the operator interface. A password must be entered before the "current value" can be adjusted. The value entered can only be a number within the "set point range". The "default value" is the value held in the program that is loaded into EEPROM memory (This screen may require more than one display screen.).

SET POINT DESCRIPTION	SET POINT RANGE	DEFAULT VALUE	CURRENT VALUE
Lead pump starting pressure	205 to 1035 kPa30 to 150 psi	415 kPa60 psi	xxx KpApsi
Issue flow to start second pump in the sequence	25 to 40 L/s450 to 650 gpm	35 L/s560 gpm	xxx L/sgpm
Return flow to enable next pump in sequence to start	0.5 to 6 L/s10 to 100 gpm	2.5 L/s40 gpm	xxx L/sgpm
Return flow to stop second pump in the sequence (lag pump)	30 to 50 L/s500 to 800 gpm	44 L/s700 gpm	xxx L/sgpm
Return flow to initiate lead pump shutdown sequence	30 to 50 L/s500 to 800 gpm	35 L/s560 gpm	xxx L/sgpm
Timer to enable start-up of lead pump	0 to 120 seconds	0 seconds	xx seconds
Timer to enable second pump to start	0 to 120 seconds	10 seconds	xx seconds
Timer to stop second pump	0 to 120 seconds	15 seconds	xx seconds
Timer to stop first pump	0 to 60 seconds	2 seconds	xx seconds
Timer to disable Back Pressure Control Valve	0 to 360 seconds	60 seconds	xx seconds
Timer to establish fueling pump failure	5 to 30 seconds	15 seconds	xx seconds
System pressure to stop lead pump	895 to 1310 kPa130 to 190 psig	760 kPa110 psig	xxx kPapsig

#### 3.1.13.4 Screen Number 4

Duplicate the Graphic Display Drawing showing a schematic of the process flow. Refer to this screen as the graphical display. Display many operating parameters here as required in later paragraphs of this specification.

#### 3.1.13.5 Screen Number 5

This screen is a duplicate of the Alarm Annunciator and must be superimposed over the current active screen on the personal computer monitor when an alarm is activated.

#### 3.1.13.6 Screen Number 6

This screen is designed solely for assisting the testing team during initial start up to watch all of the significant parameters of the systems operation simultaneously on one screen. Include the system parameters (i.e. flows, pressures, and status) from screen 2, the set points from screen 3, and timers for all of the actions that will take place following a delay function.

#### 3.1.13.7 Screen Number 7

This screen is designed solely for displaying the seven graphs as described in Section 33 08 53 AVIATION FUEL DISTRIBUTION SYSTEM START-UP. Display the following values concurrently against time: Issue flow, Issue pressure, Return flow, Pump #1 discharge pressure, Pressure upstream of BPCV, Pressure downstream of BPCV, and Hydrant Pit Pressure. The personal computer must be capable of storing up to 1 week of data corresponding to the above values. The system must be able to produce graphs on the screen of this data and print the data in seven colors on the laser printer.

#### 3.1.13.8 Screen Number 8

This screen is an alarm history screen, referred to as the Alarm History Display. This screen must be capable of storing and displaying all alarms that have occurred in the system for at least a period of 30 days.

#### 3.1.13.9 Screen Number 9

This screen is designed solely for displaying the parameters and process involved in the Tightness Test as described in this specification and on the drawings. Display the following values concurrently against time: Pressure (as sensed by PIT3) . The system must be able to produce graphs on the screen of this data and be able to print the data in color on the laser printer.

#### 3.1.14 Laptop Computer

The Laptop computer is used to create, edit, and load the ladder logic program into the PLCs and the operator interface graphics control program into the personal computer. The Laptop is also used to monitor the PLCs memory and ladder logic program. Store the computer in a lockable cabinet located within the Pump Control Panel.



### 3.2 PROGRAMMABLE LOGICAL CONTROLLER (PLC) HARDWARE AND SOFTWARE

#### 3.2.1 General

\*\*\*\*\*  
NOTE: The pressure indicating transmitters and the differential pressure transmitters are the only devices that the PLC can monitor for a possible failure. Define failures in the following manners: When the pressure indicating transmitters differ with each other by more than 70 kPa (10 psig) after a 10 second delay, assume the lower reading transmitter has failed. When the issue differential pressure transmitters differ from each other by more than 2 L/s (30 gpm) after a ten second delay, assume the lower reading transmitter has failed. When the return differential pressure transmitters differ from each other by more than 1.2 L/s (20 gpm) after a ten second delay, assume the lower reading transmitter has failed.  
\*\*\*\*\*

The basic operation of the redundant PLC system is (Reference "Control System Block Diagram" on the drawings):

- a. CPU-1 and it's associated I/O rack (I/O-1) sends system outputs to appropriate devices and receive input signals from System-1 redundant field devices (PIT-1, DPT-1, DPT-3, flow switches, valve limit switches), System-2 redundant field devices (PIT-2, DPT-2, DPT-4, flow switches, valve limit switches), and all nonredundant field devices as listed on the drawings.
- b. CPU-2 and it's associated I/O rack (I/O-2) sends system outputs to appropriate devices and receive input signals from System-1 redundant field devices (PIT-1, DPT-1, DPT-3, flow switches, valve limit switches), System-2 redundant field devices (PIT-2, DPT-2, DPT-4, flow switches, valve limit switches), and all nonredundant field devices as listed on the drawings.
- c. Within each rack (I/O-1 and I/O-2) System-1, System-2, and nonredundant inputs and outputs must not be mixed on the same input/output module.
- d. Under normal operation: The system input select switch is in the "SYS-1" position. CPU-1 is controlling the system using System-1 and nonredundant inputs from I/O-1 and any set point changes from the personal computer. CPU-2 is being updated by CPU-1 or concurrently monitoring System-1 inputs from I/O-2.
- e. If under normal operation CPU-1 recognizes that a System-1 input has failed (see note below) it must change over to the System-2 redundant input on I/O-1 and report the failure to the personal computer alarm screen.

Note: The pressure indicating transmitters and the differential pressure transmitters are the only devices that the PLC can monitor for a possible failure. Failures must be defined in the following manners: When the pressure indicating transmitters differ from each other by more than 70 kPa 10 psig after a ten second delay, assume the

lower reading transmitter has failed. When the issue differential pressure transmitters differ from each other by more than 2 L/s 30 gpm after a ten second delay, assume the lower reading transmitter has failed. When the return differential pressure transmitters differ from each other by more than 1.2 L/s 20 gpm after a ten second delay, assume the lower reading transmitter has failed.

- f. During normal operation there are two ways for CPU-2 to take control of the system: 1) CPU-1 identifies its own internal fault and hands over control to CPU-2. 2) CPU-2 identifies a fault in CPU-1 and takes control from CPU-1. When CPU-2 is in control of the system it must annunciate the fault condition and must be using any updated inputs from the personal computer and must use System-1 inputs. If CPU-2 senses a fault on a System-1 input it must then switch over to the appropriate System-2 input. If power is lost to System-1 inputs then CPU-2 must use all of the System-2 inputs.
- g. CPU-2 must also report any of its internal faults to CPU-1 and CPU-1 must report any faults it detects in CPU-2.
- h. When the operators think the system is not working and the PLCs do not detect any faults the operator can move the system input select switch from the "SYS-1" position to the "SYS-2" position. With the switch in the "SYS-2" position the PLCs are using System-2 inputs.

### 3.2.2 Programs

- a. Provide two copies of all working programs (i.e. PLC logic, personal computer) on read only CD or DVD as well as a printed program listing.
- b. The Contractor (programmer) must provide rung comments (documentation) in the ladder logic program. Each device, on the ladder, must be identified as to the type of device, i.e. limit switch XX, flow indicator XX, motor starter XX, etc. Rung comments must be provided for input and output rungs. The programmer must also provide a comment describing the function of each rung or group of rungs that accomplish a specific function.

## 3.3 GRAPHICS DISPLAY SCREEN

### 3.3.1 General

The graphic display screen must be capable of being displayed on the personal computer monitor.

### 3.3.2 Display Presentation

Depict the process fuel flow schematically as indicated on the drawings. Integrate red, green, and amber symbols integrated with the process schematic to provide current equipment status graphically. Locate the symbols immediately adjacent to related equipment symbol.

### 3.3.3 Process Schematic

The process schematic graphic representation must utilize conventional symbols when possible. Size and space symbols and flow lines so as to provide a clear representation of the system process. The Graphic Display must be suitable for supervised field modification when future items are added. Minor changes may be incorporated to allow proper line width and

spacing. Component arrangement, piping routing, and location of valves must match the flow diagram. The Graphic Display layout requires Government approval.

#### 3.3.4 Digital Flow and Pressure Indicators

Provide digital displays for the flows, pressures, and levels as indicated on the drawings.

### 3.4 INSTALLATION

Installation must conform to the manufacturer's drawings, written recommendations and directions.

#### 3.4.1 Shop Drawing

The shop drawing must be clear and readable and preferably drawn using a computer aided drafting package. At the conclusion of the project the diagram drawings must be redrafted to include all as-built conditions. These updated drawings must be included in the O&M Manuals and appropriate section of the drawings placed in a data pocket located in each of the enclosures. The shop drawing at a minimum must show:

- a. Overall dimensions, front, side and interior elevation views of the PCP showing size, location and labeling of each device.
- b. Overall dimensions, front elevation of the GDP showing graphical layout and size, location and labeling of each device.
- c. Power ladder diagram indicating power connections between TVSS, power conditioners, PLCs, power supplies and field and panel devices. Any terminal block connection numbers used must be indicated.
- d. Control ladder diagram indicating control connections between field and devices and PLC I/O modules. Terminal block connection numbers and PLC terminal numbers must be indicated.
- e. Communication connections between PLCs and I/O racks. Communication channel numbers must be indicated.
- f. Bill of materials.
- g. Written control sequence covering all inputs, outputs, and control scheme.

#### 3.4.2 System Start-Up and Testing

- a. At PCP start-up and testing provide personnel, on site, to provide technical assistance, program fine tuning, and to start-up and test the system. Start-up and testing must be coordinated with the overall fueling system start-up test specified in Section 33 08 53, AVIATION FUEL DISTRIBUTION SYSTEM START-UP. Prior to this test, all connections must have been made between the PCP, the personal computer, the motor control center, and all field devices. In addition, check wiring for continuity and short circuits. Adjust set point values, timing values, and program logic as required to provide a functional hydrant fuel control system. Once the system has been fine tuned and passed the system test, load the new system default values into the PLC EEPROM and adjust the personal computer screens to indicate the new values.

- b. Submit a step-by-step testing procedure of the PCP, [Testing Plan](#). Design the test to show that every device (lights, switches, personal computer display screens, alarms, etc.) on the PCP and personal computer is in working order and that the PLC program controls the system per specifications. Perform the test in conjunction with Section [33 08 53](#) AVIATION FUEL DISTRIBUTION SYSTEM START-UP. Include a place for the contractor and Government representative to initial each step of the plan after satisfactory completion and acceptance of each step. Certify and submit the complete initialed testing plan, [Record of Test](#).

#### 3.4.3 Training [Plan for Instructing Personnel](#)

Upon completion of the system start-up a competent technician regularly employed by the PCP manufacturer must hold a training class for the instruction of Government personnel in the operation and maintenance of the system. Provide both classroom type theory instruction and hands-on instruction using operating equipment provided. The period of instruction must be a minimum of three 8-hour working days. The training must be designed to accommodate 8 operators, four maintenance personnel, and two programmers. The Government must receive written notice (via Contracting Officer) a minimum of 14 days prior to the date of the scheduled classes.

- a. Furnish a written lesson plan and training schedule for Government approval at least 60 days prior to instructing operating, maintenance and programming personnel. Concurrently submit above to the SME for their input into the review process. Approval of lesson plan will be based on both Government and SME concurrence. This plan must be tailored to suit the requirements of the Government. The training must be divided into three separate classes. Each class must be tailored to a specific group of personnel. The groups are: 1) Operators, those that will use the control system on a day to day basis; 2) Maintenance personnel, those that will perform routine and non-routine maintenance and trouble shooting of the control system; 3) Programmers, those that will make changes to and trouble shoot the PLC and personal computer programs. The training program must provide:
  - (1) a detailed overview of the control system including the complete step-by-step procedures for start-up, operation and shut-down of the control system.
  - (2) a general overview of programmable logic controllers
  - (3) the maintenance of equipment installed
  - (4) the programming of the PLC and Personal Computer
  - (5) trouble shooting of the system
- b. Use the complete approved Operation and Maintenance manuals for Section [33 09 54](#) PUMP CONTROL AND ANNUNCIATION SYSTEM (CUT-N-COVER TANKS) and [26 20 00](#) INTERIOR DISTRIBUTION SYSTEM (specifically pertaining to the motor control center and its relay ladder diagrams) for instructing operating personnel. Include both classroom and hands-on field instruction. Record the class in DVD format.
- c. Also provide training courses in DVD format covering system overview, operation, maintenance, trouble shooting, and programming. Produce these DVDs on-site using the supplied Pump Control Panel as the teaching aid, or commercially produced DVDs by the PLC manufacturer or third party who specializes in training on PLC systems. In conjunction with the DVDs, provide O&M Manuals, which follow along with the DVDs.

### 3.5 PLC CONTROL SYSTEM SEQUENCE OF OPERATION

#### 3.5.1 General

The following describes general functions of the fueling system components.

##### 3.5.1.1 Abbreviations

- a. SYS-1: components of System #1 including UPS#1, power supplies, CPU-1, I/O-1, and system #1 input and outputs.
- b. SYS-2: components of System #2 including UPS#2, power supplies, CPU-2, I/O-2, and system #2 input and outputs.
- c. CPU-1: SYS-1 PLC CPU.
- d. CPU-2: SYS-2 PLC CPU.
- e. I/O-1: SYS-1 PLC input/output modules.
- f. I/O-2: SYS-2 PLC input/output modules.
- g. PCP: Pump Control Panel.
- h. PC: Personal Computer.
- i. UPS: Uninterruptible Power Supply.

#### 3.5.2 Operating Tanks

##### 3.5.2.1 Level Control

\*\*\*\*\*  
NOTE: Use this paragraph if float switches rather  
than electronic level switches are used for  
determining tank level alarms  
\*\*\*\*\*

Each operating tank has four level float switches to measure low-low, low, high and high-high levels. The switches are DPDT for the redundancy and each pole must be connected to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing.

- a. Low-Low Level: When the low-low level float is activated the associated tank's graphic display low-low level light illuminates. The following must occur if the tank's outlet valve is not fully closed: activate the low-low level critical alarm sequence, fueling pumps are disabled in automatic mode and pumps are not allowed to start automatically. If all tanks are at low-low level, do not automatically start fueling pumps.
- b. Low Level: When the low level float is activated the associated tank's graphic display low level light illuminates and the alarm annunciator's low level non-critical low level alarm sequence activates.
- c. High Level: When the high level float is activated the associated tank's graphic display high level light illuminates and the alarm annunciator's non-critical high level alarm sequence activates.
- d. High-High Level: When the high-high level float is activated the associated tank's graphic display high-high level light illuminates, the alarm annunciator's critical high-high level alarm sequence activates, fueling pumps running in automatic mode must be disabled and no pump must be allowed to start automatically.

### 3.5.2.2 Level Control

\*\*\*\*\*  
NOTE: Use this paragraph if electronic level  
switches rather than float switches are used for  
determining tank level alarms  
\*\*\*\*\*

Each operating tank has level switches to monitor low-low, low, high, and high-high fuel levels. Connect the switches to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. The following alarms must be reported.

- a. Low-Low Level: When the low-low level elevation is attained the associated tank's GDP low-low level light illuminates. The following must occur if the tank's outlet valve is not fully closed: activate the low-low level critical alarm sequence, fueling pumps are disabled in automatic mode and pumps are not allowed to start automatically. If all tanks are at low-low level, do not automatically start fueling pumps.
- b. Low Level: When the low level elevation is attained the associated tank's GDP low level light illuminates. The alarm annunciator's non-critical alarm sequence activates.
- c. High Level: When the high level elevation is attained the associated tank's GDP high level light illuminates and the alarm annunciator's non-critical alarm sequence activates.
- d. High-High Level: When the high-high level elevation is attained the associated tank's GDP high-high level light illuminates, the alarm annunciator's critical alarm sequence activates, fueling pumps running in automatic mode must be disabled and no pump must be allowed to start automatically.

### [3.5.2.3 Outlet Valve

Each operating tank's outlet valve has two limit switches to indicate valve position. The closed limit switch is DPDT for redundancy and each pole must be connected to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. The closed limit switch must close when the valve is fully closed. When the closed limit switch is closed the associated tank's valve graphic display closed light must activate. When the valve is fully open, the open limit switch is closed. At this time the associated tank's valve graphic display open light must activate.

### ]3.5.3 Product Recovery Tank

#### 3.5.3.1 Fuel Transfer Pump (FTP)

The pump's motor controller has a status relay to indicate the on/off status of the pump. Connect the status relay to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. When status relay is open the pump's graphic display off light must light. When the status relay is closed the pump's graphic display on light must light. Also use the status relay state to start and stop the pumps elapsed run time timer.

### 3.5.3.2 Overfill Valve (OV)

\*\*\*\*\*  
**NOTE: The automatic starting and stopping of the fuel transfer pump is accomplished by the actuation of tank float switches connected to the control circuit in the motor control center. The PLC system does not control the starting and stopping.**  
\*\*\*\*\*

The tank's overfill valve has a limit switch to indicate valve position. The switch is SPST and must be connected to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. The switch must close when the valve is fully closed. When the limit switch is closed the tank's graphic display valve closed light must light and the alarm annunciator's non-critical alarm sequence activates. When the limit switch is open the tank's graphic display valve open light must light.

### 3.5.3.3 High Level Alarm

The tank has a high level alarm float switch. Connect the switch, SPST, to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. When the high level alarm float is activated the tank's graphic display high level light must light and the alarm annunciator's critical alarm sequence activates.

### 3.5.3.4 High-High Level Alarm

The tank has a high-high level alarm float switch. Connect the switch, SPST, to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. When the high-high level alarm float is activated the tank's graphic display high-high level light must light and the alarm annunciator's critical alarm sequence activates.

### 3.5.3.5 Leak Detection

The tank has a leak detection system. Connect the leak detection systems alarm relay to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. When the leak alarm is activated the alarm annunciator's non-critical alarm sequence activates.

## 3.5.4 Fueling Pumps (FP)

There are three fueling pumps with a maximum of two pumps running at one time in the automatic mode. The lead pump selector switch selects the pump starting sequence. Each pump's motor controller has a status relay to indicate the on/off status of the pump. Connect the status relay to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. When status relay is open the associated pump's graphic display off light must activate and screen number 2 must indicate on. When the status relay is closed the associated pump's graphic display on light must activate and screen number 2 must indicate off. Also use the status relay state to start and stop the pumps elapsed run time timer and display on screen number 2.

## 3.5.5 Jockey Pump (JP)

There is one jockey pump. The jockey pump must not run concurrently with any of the fueling pumps. The jockey pump's motor controller has a status

relay to indicate the on/off status of the pump. The status relay must be connected to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. When status relay is open the associated pump's graphic display off light must activate and screen number 2 must indicate on. When the status relay is closed the associated pump's graphic display on light must activate and screen number 2 must indicate off. The status relay state must also be used to start and stop the elapsed run time timer and must be displayed on screen number 2.

#### 3.5.6 Pumphouse Drain Pump (PDP)

There is one return pump. The return pump's motor controller (ON-OFF switch) has a status contact to indicate the on/off status of the pump. The status contact must be connected to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. When status contact is open the associated pump's graphic display off light must illuminate and screen number 2 must indicate on. When the status contact is closed, the associated pump's graphic display on light must illuminate and screen number 2 must indicate off.

#### 3.5.7 Flow Switch, FP

On the discharge side of each pump is a flow switch to indicate positive flow (fail safe feature). The flow switch is DPDT for redundancy and each pole must be connected to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. If the PLC has given a signal to start a pump and the flow switch has not closed before the set point timer expires or if the flow switch opens after the pump has been running then the pump must be in a failure state and it must be disabled (taken out of the starting sequence), the alarm annunciator's non-critical alarm sequence must also be activated, and the next pump in the start sequence started. After the PLC has stopped all of the pumps, any failed pump must be added back into the start sequence.

#### 3.5.8 Flow Switch, JP

On the discharge side of the jockey pump is a flow switch to indicate positive flow (fail safe feature). The flow switch is DPDT for redundancy and each pole must be connected to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. If the PLC has given a signal to start the jockey pump and the flow switch has not closed before the set point timer expires or if the flow switch opens after the pump has been running then the pump will be in a failure state so it must be disabled. The alarm annunciator's non-critical alarm sequence must also be activated.

#### 3.5.9 Flow Switch, PDP

On the discharge side of the PDP is a flow switch to indicate positive flow (fail safe feature). The flow switch is DPDT for redundancy and each pole must be connected to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing.

#### 3.5.10 Transmitters

##### 3.5.10.1 Pressure Indicating Transmitter (PIT)

The PIT's measure system pressure in **kiloPascals** **pounds per square inch**. There are two PITs connected to the PCP for redundancy. PIT-1 and PIT-2 are connected to both SYS-1 and SYS-2 as indicated on the Terminal Block



Connection drawing. The system pressure is sent to personal computer display.[ PIT-3 is connected directly to the Tightness Test Panel.]

#### 3.5.10.2 Differential Pressure Transmitter (DPT)

he DPT's measure flow in **liters per second** **gallons per minute**. There are two issue DPTs (DPT-1 and DPT-2) and two return DPTs (DPT-3 and DPT-4) for redundancy. The DPTs are connected to both SYS-1 and SYS-2 as indicated on the Terminal Block Connection drawing. The net flow is sent to the personal computer display. The issue rate, return rate and net flow must be displayed on the personal computer.

#### 3.5.10.3 Pressure Sensors (PS)

The PS measure system pressure in **kiloPascals** **pounds per square inch**. There are three PS installed on the system and there are PCP preparations made for a fourth PS to be temporarily wired in from a Hydrant Pit. PS-1, PS-2, PS-3, and PS-4 are connected to SYS-1 only as indicated on the Terminal Block Connection drawing. These sensors must report various system pressures to the personal computer to be used for the creation of the system graphs as required for screen 7 and described in Section **33 08 53** AVIATION FUEL DISTRIBUTION SYSTEM START-UP.

#### 3.5.11 Control Valves

##### 3.5.11.1 Flushing Valve (FV)

Connect the FV to I/O-1, I/O-2 and UPS#3 as indicated on the Terminal Block Connection drawing. Activate the graphical display open and closed lights and screen number 2 status based on the PLC's output status for the valve. Base the valve status on the table listed below.

Flushing Valve Operation - One Solenoid			
Fueling Mode per PCP Selector Switch	Valve Action	Solenoid	Graphical Display
Re-Fuel or Auto Mode	Open	De-energized	Open
Loop Flush	Open	De-energized	Open
Pantograph Flush	Closed	Energized	Closed
Off Mode	Open	De-energized	Open
Tightness Test	Open	De-energized	Open

##### 3.5.11.2 Pressure Control Valve (PCV)

\*\*\*\*\*  
**NOTE: Only include if Scheme B Control is utilized.**  
\*\*\*\*\*

Connect the PCV to I/O-1, I/O-2 and UPS #3 as indicated on the Terminal Block Connection drawing. Activate the graphical display enabled and closed lights and screen number 2 status based on the PLC's output status for the valve. Base the valve status on the table listed below.

Pressure Control Valve Operation - Two Solenoids				
Fueling Mode per PCP Selector Switch	Valve Action	Solenoid A	Solenoid B	Graphical Display
Automatic Mode Pumps Off	Enabled	De-energized	De-energized	Enabled
Automatic Mode Pump(s) On	Closed	Energized	De-energized	Closed
Flush Mode Pumps On	Closed	Energized	De-energized	Closed
Flush Mode Pumps Off	Enabled	De-energized	De-energized	Closed
Off Mode Pump(s) On	Closed	Energized	De-energized	Closed
Off Mode Pumps Off	Enabled	De-energized	De-energized	Enabled
Tight. Test-Hi Pres	Closed	Energized	De-energized	Closed
Tight. Test-Static	Enabled	De-energized	De-energized	Enabled
Tight. Test-Low Pres	Enabled	Energized	Energized	Enabled

### 3.5.11.3 Backpressure Control Valve (BPCV)

The BPCV must be connected to I/O-1, I/O-2 and UPS #3 as indicated on the Terminal Block Connection drawing. The graphical display enabled and closed lights and screen number 2 status must activate based on the PLC's output status for the valve. The valve status must be based on the table listed below.

Backpressure Control Valve Operation - Solenoid			
Fueling Mode per PCP Selector Switch	Valve Action	Solenoid A	Graphical Display
Re-Fuel / Pumps on	Enabled	Energized	Enabled
Re-Fuel / Pumps off	Open	Energized	Open
Both Flush Modes	Open	De-energized	Open
Off Mode	Open	De-energized	Open

Backpressure Control Valve Operation - Two Solenoids				
Fueling Mode per PCP Selector Switch	Valve Action	Solenoid A	Solenoid B	Graphical Display
Both Flush Modes	Open	Energized	Energized	Open
Automatic Mode Pump(s) On	Enabled	Energized	De-energized	Enabled
Automatic Mode Pumps Off	Closed	De-energized	De-energized	Closed
Off Mode Pump(s) On	Enabled	Energized	De-energized	Enabled
Off Mode Pumps Off	Closed	De-energized	De-energized	Closed
Tightness Test	Enabled	De-energized	De-energized	Enabled

### 3.5.12 Safety Circuit

#### 3.5.12.1 Emergency Stop Status

Connect the emergency stop circuit status relay (ER1) N.O. contact to I/O-1, I/O-2 and UPS#3 as indicated on the Terminal Block Connection drawing. When the circuit is activated the alarm annunciator's critical alarm sequence is activated and any calls to start fueling pumps must be canceled and no additional pump start signals must be sent until the circuit has been reset. The fueling pumps will actually be stopped by a emergency stop circuit status relay (ER2) N.O. contact in the fuel pump motor control circuit located in the motor control center.

#### 3.5.12.2 Emergency Shutoff Valves (ESO) Status

Connect the ESO status relay (ER2) N.O. contact to I/O-1, I/O-2 and UPS#3 as indicated on the Terminal Block Connection drawing. When the relay is closed the GDP valve open lights must light. When the relay is open the GDP valve closed lights must light.

#### 3.5.12.3 Circuit Power Status

Connect the safety circuit power status relay (ER3) N.O. contact to I/O-1, I/O-2 and UPS#3 as indicated on the Terminal Block Connection drawing. When the relay is closed the PCP emergency circuit power on light must light.

### 3.5.13 Pump Control Panel

#### 3.5.13.1 CPU Faults

The PCP mounted CPU-1 and CPU-2 on lights are connected to both SYS-1 and SYS-2. The associated CPU light must light when no system faults are detected. When a fault is detected by the CPU or it's redundant CPU the faulted CPU's on light must be turned off and the alarm annunciator's

non-critical alarm sequence must be activated.

#### 3.5.13.2 Input Select Switch

The 2-position input select switch controls which inputs (System-1 or System-2) are being used. Connect each switch position to both SYS-1 and SYS-2. The OI display indicates the active system.

#### 3.5.13.3 Mode Select Switch

The [5][4]-position switch selects what mode of fueling is active: **automaticRe-Fueling**, loop flush, [ pantograph flush,] **Tightness Test**, or off. Each switch position must be connected to both SYS-1 and SYS-2. The screen number 2 status must indicate the active mode.

#### 3.5.13.4 Lead Pump Selector Switch

The 3-position switch selects which pump is the lead pump. The switch position fixes the starting sequence for all pumps. The sequences must be 1-2-3, 2-3-1, and 3-1-2. The off sequence must be the reverse of the start sequence; therefore, first on will be last off. A maximum of two pumps are allowed to run at one time. If a pump fails to start or fails during operation, that pump must be disabled and the next pump in the sequence started. The screen number 2 status display must indicate the lead pump.

#### 3.5.13.5 PCP Temperature Alarm

The alarm thermostat when activated must activate the alarm annunciator's non-critical alarm sequence.

### 3.6 OPERATING PROGRAM REQUIREMENTS

Store the control system's logic program on an EEPROM chip. Permanently store default values of operator adjustable parameters on the chip with the capability of resetting the values in RAM to the values within the range specified below. The default values can be changed through the use of the personal computer (after the correct password has been entered). After loss of power and battery failure the adjustable settings must revert back to the default values located on the chip. The default values shown here must be reset to the values determined during the system start up and test.

\*\*\*\*\*  
**NOTE: Delete the addressable parameter accompanied by an asterisk(\*) for control Scheme "A".**  
**Addressable parameters accompanied by two asterisks(\*\*) apply to Scheme "A" only.**  
\*\*\*\*\*

SET POINT DESCRIPTION	SET POINT RANGE	DEFAULT VALUE
Lead pump starting pressure	205 to 1035 kPa 30 to 150 psi	415 kPa 60 psi

SET POINT DESCRIPTION	SET POINT RANGE	DEFAULT VALUE
Issue flow to start second pump in sequence	25 to 40 L/s 450 to 650 gpm	35 L/s 560 gpm
Return flow to enable next pump in sequence to start	0.5 to 6 L/s 10 to 100 gpm	2.5 L/s 40 gpm
Return flow to stop second pump in sequence (lag pump)	30 to 50 L/s 500 to 800 gpm	44 L/s 700 gpm
Return flow to initiate lead pump shutdown sequence	30 to 50 L/s 500 to 800 gpm	35 L/s 560 gpm
Timer to enable start-up of lead pump	0 to 120 seconds	0 seconds
Timer to enable second pump to start	0 to 120 seconds	10 seconds
Timer to stop second pump	0 to 120 seconds	15 seconds
Timer to stop first pump	0 to 60 seconds	2 seconds
Timer to stop first pump	0 to 15 minutes	10 minutes

SET POINT DESCRIPTION	SET POINT RANGE	DEFAULT VALUE
Timer to de-energize (close) Back Pressure Control Valve	0 to 360 seconds	60 seconds
Timer to establish fueling pump failure	5 to 30 seconds	15 seconds
System pressure to stop lead pump	895 to 1310 kPa130 to 190 psig	760 kPa110 psig
Should the operator enter a value not within the range for that parameter, the personal computer must indicate "INVALID ENTRY" and revert back to the previous value.		
A number inside braces, {x}, in the following paragraphs indicates that the number may be changed by the operator via the operator interface within the Set Point Range listed above.		

### [3.7 AUTOMATIC MODE - IDLE CONDITION (GOOD JOCKEY PUMP)]

The fueling system is intended to remain continuously pressurized while in the idle condition. This allows the system to respond immediately to aircraft refueling and defueling requirements. Periodically, in the idle condition, the system will lose minimal pressure. When this occurs, the control system will automatically repressurize in the following sequence:

- a. The jockey pump will start when the system pressure is less than {448} kPa {65} psig continuously for {5} seconds. If the pressure then rises above {448} kPa {65} psig before the timer expires, the timer must reset.
- b. After the timer expires:
  - (1) The jockey pump will start.
  - (2) All valve positions will remain in the state they were in prior to jockey pump start.
- c. With the jockey pump running, 0.31 L/s 5 gpm will flow through the issue venturi. The system pressure upstream of the BPCV will gradually increase {517} kPa {75} psig. When the pressure reaches {517} kPa {75} psig the jockey pump will stop.

- d. If the conditions exist for a fueling pump to be called to start, the jockey pump will not start or continue to run.
- e. When the jockey pump is called to start, a 15 second timer must start. If the timer expires before the flow switch closes the pump must be called off, the alarm annunciator's associated non-critical alarm sequence must activate.
- f. If the jockey pump's flow switch opens after the pump has successfully started the pump must be called off, the alarm annunciator's associated non-critical alarm sequence must activate.

### 13.8 AUTOMATIC MODE - IDLE CONDITION (FAILED JOCKEY PUMP)

The fueling system is intended to remain continuously pressurized while in the idle condition. This allows the system to respond immediately to aircraft refueling and defueling requirements. Periodically, in the idle condition, the system will lose minimal pressure. When this occurs, the control system will automatically repressurize in the following sequence:

- a. The lead pump will start when the system pressure is less than {414} kPa {60} psig continuously for {0} seconds. If the pressure then rises above {414} kPa {60} psig before the timer expires, the timer must reset.
- b. After the timer expires:
  - (1) The BPCV solenoid 'A' must be energized to enable the valve to modulate the system pressure at it's set point.
  - (2) The PCV solenoid 'A' must be energized to close the valve.
  - (3) The D/FV solenoid 'A' must be de-energized so the valve is closed and solenoid 'B' must be de-energized.
- c. With the lead pump running, 45 L/s 600 gpm will flow through the issue venturi. The system pressure upstream of the BPCV will increase to the BPCV set point of 896 kPa 130 psig. At this pressure the BPCV will start to open and the valve will modulate as required to pass sufficient flow through the return venturi to maintain pressure upstream of the valve.
- d. With the lead pump running and no fueling demand the return venturi flow rate will equal the issue venturi flow rate. When the return venturi flow rate is greater than {42} L/s {560} gpm a {300} second timer must start. If the flow rate drops below {42} L/s {560} gpm before the timer expires, the timer must reset, and no changes must be made to the pump and valve status.
- e. After the timer expires:
  - (1) The BPCV solenoid 'A' must be de-energized to close the valve.
  - (2) The PCV solenoid 'A' must be de-energized to bleed system pressure to 517 kPa 75 psig.
  - (3) When system pressure rises to 965 kPa 140 psig a {2} second timer must start. After the timer has expired, the lead pump must be stopped.

(4) The Defuel/Flush valve solenoid "A" must be energized 30 seconds after lead pump shut down to allow it to open at 552 kPa 80 psig for defuel operations.

- f. The system has now returned to a pressurized and idle condition.
- g. When a fueling pump is called to start, a 15 second timer must start. If the timer expires before the flow switch closes the pump must be called off, the alarm annunciator's associated non-critical alarm sequence must activate and the next pump in the sequence must be called to start.
- h. If a fueling pump flow switch opens after the pump has successfully started the pump must be called off, the alarm annunciator's associated non-critical alarm sequence must activate and the next pump in the sequence must be called to start.

### [3.9 AUTOMATIC MODE - REFUELING CONDITION

To start an aircraft fueling operation, an operator connects fueling equipment such as a pantograph to an aircraft and to a hydrant control valve. When the operator opens the hydrant control valve by use of an hydraulic operated "Deadman", the following sequence occurs:

- a. The lead pump will start when the PIT senses a pressure less than {415} kPa {60} psig continuously for {0} seconds. If the pressure then rises above {415} kPa {60} psig before the timer expires, the timer must reset.
- b. After the timer expires:
  - (1) The BPCV solenoid 'A' must be energized to enable the valve to modulate the system pressure at it's set point.
  - (2) The PCV solenoid 'A' must be energized to close the valve.
- c. With the lead pump running, +38 L/s 600 gpm will flow through the issue venturi. The system pressure upstream of the BPCV will increase to the BPCV set point of 550 kPa 80 psig. At this pressure the BPCV will start to open and the valve will modulate as required to pass sufficient flow through the return venturi to maintain pressure upstream of the valve.
- d. With lead pump running and a issue venturi flow rate greater than {35} L/s {560} gpm and a return venturi flow rate greater than {2.5} L/s {40} gpm and less than {35} L/s {560} gpm the lead pump will continue to run and the BPCV will modulate to pass flow as necessary to maintain upstream system pressure.
- e. With the lead pump running and a issue venturi flow rate greater than {35} L/s {560} gpm and a return venturi flow rate greater than {35} L/s {560} gpm a {300} second timer must start. If issue venturi flow rate falls below {35} L/s {560} gpm or the return venturi flow rate falls below {35} {560} before the timer expires, the timer must reset, and no changes must be made to the pump and valve status.
- f. After the timer expires:



- (1) The BPCV solenoid 'A' must be de-energized to close the valve.
  - (2) The PCV solenoid 'A' must be de-energized to bleed system pressure to 520 kPa 75 psig.
  - (3) When system pressure rises to 760 kPa 110 psig a {2} second timer must start. After the timer has expired, the lead pump must be stopped.
- g. With the lead pump running and a issue venturi flow rate greater than {35} L/s {560} gpm and a return venturi flow rate less than {2.5} L/s {40} gpm a {10} second timer must start. If the issue venturi flow rate falls below {35} L/s {560} gpm or the return venturi flow rate rises above {2.5} L/s {40} gpm before the timer expires, the timer must reset, and no changes must be made to the pump and valve status.
  - h. After the timer expires: The second pump must start.
  - i. With the lead and second pumps running and a issue venturi flow rate greater than {73} L/s {1160} gpm and a return venturi flow rate of greater than {2.5} L/s {40} gpm and less than {44} L/s {700} gpm the lead and second pumps must continue to run and the BPCV must modulate as necessary to maintain system pressure.
  - j. With the lead and second pumps running and a issue venturi flow rate greater than {73} L/s {1160} gpm and a return venturi flow rate greater than {44} L/s {700} gpm a {15} second timer must start. If issue venturi flow rate falls below {73} L/s {1160} gpm or the return venturi flow rate falls below {44} L/s {700} gpm before the timer expires, the timer must reset and no changes must be made to the pump and valve status.
  - k. After the timer expires: The second pump must be stopped.
  - l. When a fueling pump is called to start, a 15 second timer must start. If the timer expires before the flow switch closes the pump must be called off, the alarm annunciator's associated non-critical alarm sequence must activate and the next pump in the sequence must be called to start.
  - m. If a fueling pumps flow switch opens after the pump successfully started the pump must be called off, the alarm annunciator's associated non-critical alarm sequence must activate and the next pump in the sequence must be called to start.

### ]3.10 RE-FUELING MODE - REFUELING CONDITION

\*\*\*\*\*  
**NOTE: Applicable to Scheme A operation**  
 \*\*\*\*\*

To start an aircraft fueling operation, an operator connects fueling equipment such as a pantograph to an aircraft and to a hydrant control valve. The operator opens the hydrant control valve by use of an hydraulic operated "Deadman":

- a. The lead pump will start when the local Start pushbutton is pushed.
- b. The BPCV solenoid must be energized to enable the valve to modulate

the system pressure at it's set point.

- c. With the lead pump running, +38 L/s 600 gpm will flow through the issue venturi. The system pressure upstream of the BPCV will increase to the BPCV set point of 900 kPa 130 psig. At this pressure the BPCV will start to open and the valve will modulate as required to pass sufficient flow through the return venturi to maintain pressure upstream of the valve.
- d. With lead pump running and an issue venturi flow rate greater than {35} L/s {560} gpm and a return venturi flow rate greater than {2.5} L/s {40} gpm the lead pump will continue to run and the BPCV will modulate to pass flow as necessary to maintain upstream system pressure.
- e. With the lead pump running and an issue venturi flow rate greater than {35} L/s {560} gpm and a return venturi flow rate less than {2.5} L/s {40} gpm a {10} second timer must start. If issue venturi flow rate falls below {35} L/s {560} gpm or the return venturi flow rate rises above {2.5} L/s {40} gpm before the timer expires, the timer must reset, and no changes must be made to the pump and valve status.
- f. After the timer expires: The second pump must start.
- g. With the lead pump running and an issue venturi flow rate greater than {73} L/s {1160} gpm and a return venturi flow rate greater than {2.5} L/s {40} gpm and less than {44} L/s {700} gpm the lead and second pumps must continue to run and the BPCV must modulate as necessary to maintain system pressure.
- h. With the lead and second pumps running and an issue venturi flow rate greater than {73} L/s {1160} gpm and a return venturi flow rate greater than {44} L/s {700} gpm a {15} second timer must start. If issue venturi flow rate falls below {73} L/s {1160} gpm or the return venturi flow rate falls below {44} L/s {700} gpm before the timer expires, the timer must reset and no changes must be made to the pump and valve status.
- i. After the timer expires: The second pump must be stopped.
- j. When a fueling pump is called to start, a 15 second timer must start. If the timer expires before the flow switch closes the pump must be called off, the alarm annunciator's associated non-critical alarm sequence must activate and the next pump in the sequence must be called to start.
- k. If a fueling pumps flow switch opens after the pump successfully started the pump must be called off, the alarm annunciator's associated non-critical alarm sequence must activate and the next pump in the sequence must be called to start.
- l. When a fueling operation is complete the operators will depress the Stop button and the lead pump must stop and the BPCV must be de-energized.
- m. If the operators forget to depress the stop button following completion of a fueling operation, a timer will be counting down at all times that the system is showing issue flow of greater than {35} L/s {560} gpm and a return flow of greater than {35} L/s {560} gpm.

This timer will be 10 minutes and upon reaching 10 minutes the lead pump must be shut down and the BPCV must be de-energized.

### 3.11 LOOP FLUSH MODE

This mode must be used when the system needs to be flushed of water or sediment. The operators will first place the manual valves in the desired position to select the appropriate flow path. Placing the selector switch in "loop flush" the following must occur:

- a. The BPCV solenoid must be de-energized to force it open. Both BPCV solenoids must be energized to force it open.
- b. Start the fueling pump(s) manually using the Hand-Off-Auto or Hand-Auto switch to obtain the desired flow rate. The automatic pump starts must be disabled in this mode.
- c. The PCV solenoid "A" must be energized when pump(s) are on and de-energized when the pumps are off. The PCV solenoid "B" is de-energized.
- d. When a fueling pump is started, a 15 second timer must start. If the timer expires before the flow switch closes the alarm annunciator's associated non-critical alarm sequence must activate.
- e. If a fueling pumps flow switch opens after the pump successfully started the alarm annunciator's associated non-critical alarm sequence must activate.

### [3.12 PANTOGRAPH FLUSH MODE

\*\*\*\*\*  
**NOTE: This paragraph is not required if a separate  
flush line is provided for the system.**  
\*\*\*\*\*

This mode must be used when pantographs need to be flushed of water or sediment. The operators will first place the manual valves in the desired positions to select the appropriate flow path. Placing the selector switch in "pantograph flush" the following must occur:

- a. The BPCV solenoid must be de-energized to force it open. Both BPCV solenoids must be energized to force it open.
- b. The Flushing valve solenoid must be energized to force it closed.
- c. Start the fueling pump(s) manually using the Hand-Off-Auto or Hand-Auto switch to obtain the desired flow rate. The automatic pump starts must be disabled in this mode.
- d. The PCV solenoid "A" must be energized when pump(s) are on and de-energized when the pumps are off. The PCV solenoid "B" is de-energized.
- e. When a fueling pump is started, a 15 second timer must start. If the timer expires before the flow switch closes the alarm annunciator's associated non-critical alarm sequence must activate.
- f. If a fueling pumps flow switch opens after the pump successfully

started the alarm annunciator's associated non-critical alarm sequence must activate.

### ]3.13 TIGHTNESS TEST MODE

This mode must be used in conjunction with the Tightness Monitoring Panel provided by Section 33 52 43.11 AVIATION FUEL MECHANICAL EQUIPMENT to perform tightness tests. Placing the selector switch to "TIGHTNESS TEST" the PCP will send a signal to the Tightness Monitoring Panel telling it that it is ready to perform the tests. At this time it will also operate three MOV valves, closing I25 and I26 and opening I27. The PCP will then receive signals from the Tightness Monitoring Panel to prepare for High Pressure Test, run High Pressure Test, Prepare for Low Pressure Test, run Low Pressure Test, prepare for 2nd High Pressure Test, run 2nd High Pressure Test, and when the test is over. The following PCP actions will occur after the corresponding signal:

#### Prepare for High Pressure Test:

- a. The BPCV solenoid "A" must be de-energized and the BPCV solenoid "B" must be energized to enable the valve at the 1.1 MPa 160 psi value.
- b. The D/FV solenoid "A" must be de-energized and the D/FV solenoid "B" must be de-energized to force it closed.
- c. Automatically start the jockey pump to obtain pressure.
- d. The PCV solenoid "A" must be Energized and PCV solenoid "B" must be de-energized to close the valve.
- e. When the jockey pump is started, a 15 second timer must start. If the timer expires before the flow switch closes the alarm annunciator's associated non-critical alarm sequence must activate.
- f. If the jockey pump's flow switch opens after the pump successfully started the alarm annunciator's associated non-critical alarm sequence must activate.
- g. If the jockey pump fails to establish flow, automatically start the lead fueling pump to obtain pressure.
- h. When a fueling pump is started, a 15 second timer must start. If the timer expires before the flow switch closes the alarm annunciator's associated non-critical alarm sequence must activate.
- i. If a fueling pumps flow switch opens after the pump successfully started the alarm annunciator's associated non-critical alarm sequence must activate.
- j. MOV I32 will be opened.
- k. . The pump will continue to run until such time as the run High Pressure test signal is received. Note: the Tightness Monitoring Panel is monitoring the Loop pressure and when it is satisfied that it is high enough it will instruct the PCP to Run the High Pressure test.

#### Run High Pressure Test:

- a. MOV I32 will be closed.

- b. Jockey/Fueling pump will be shut off.
- c. The BPCV solenoid "A" must be de-energized and the BPCV solenoid "B" must be de-energized to close valve.
- d. The PCV solenoid "A" will be de-energized and the PCV solenoid "B" will be de-energized to enable the valve at the 517 kPa 75 psi value. Note: the Tightness Monitoring Panel will wait for a ten minute settling time to pass, then it will monitor the loop pressure for two minutes. Upon finishing this test it will instruct the PCP to Prepare for the Low Pressure Test.

Prepare for Low Pressure Test:

- a. MOV I32 will be opened.
- b. The PCV solenoid "A" will be energized and the PCV solenoid "B" will be energized to enable the valve at the 345 kPa 50 psi value.
- c. The system will remain in this status until such time as the PCP receives a Run Low Pressure test signal from the Tightness Monitoring Panel. Note: The Tightness Monitoring Panel will monitor the loop pressure until it reaches the 345 kPa 50 psi value. It will then instruct the PCP to run the Low pressure test.

Run Low Pressure Test:

- a. MOV I32 will be closed.
- b. The system will remain in this status until such time as the PCP receives a Prepare for 2nd High Pressure test signal from the Tightness Monitoring Panel. Note: The Tightness Monitoring Panel will wait for a ten minute settling period to expire, then it will monitor the loop pressure for two minutes. Upon finishing this test it will instruct the PCP to prepare for 2nd High Pressure Test.

Prepare for 2nd High Pressure Test:

- a. The BPCV solenoid "A" must be de-energized and the BPCV solenoid "B" must be energized to enable the valve at the 1.1 MPa 160 psi value.
- b. The D/FV solenoid "A" must be de-energized and the D/FV solenoid "B" must be de-energized to force it closed.
- c. Automatically start the jockey pump to obtain pressure.
- d. The PCV solenoid "A" must be de-energized and PCV solenoid "B" must be de-energized to close the valve.
- e. When the jockey pump is started, a 15 second timer must start. If the timer expires before the flow switch closes the alarm annunciator's associated non-critical alarm sequence must activate.
- f. If the jockey pump's flow switch opens after the pump successfully started the alarm annunciator's associated non-critical alarm sequence must activate.
- g. If the jockey pump fails to establish flow, automatically start the

lead fueling pump to obtain pressure.

- h. When a fueling pump is started, a 15 second timer must start. If the timer expires before the flow switch closes the alarm annunciator's associated non-critical alarm sequence must activate.
- i. If a fueling pumps flow switch opens after the pump successfully started the alarm annunciator's associated non-critical alarm sequence must activate.
- j. MOV I32 will be opened.
- k. pump will continue to run until such time as the run 2nd High Pressure test signal is received. Note: the Tightness Monitoring Panel is monitoring the Loop pressure and when it is satisfied that it is high enough it will instruct the PCP to Run the 2nd High Pressure test.

Run 2nd High Pressure Test:

- a. MOV I32 will be closed.
- b. Jockey/Fueling pump will be shut off.
- c. The BPCV solenoid "A" must be de-energized and the BPCV solenoid "B" must be de-energized to close valve.
- d. The PCV solenoid "A" will be de-energized and the PCV solenoid "B" will be de-energized to enable the valve at the 517 kPa 75 psi value. Note: the Tightness Monitoring Panel will wait for a ten minute settling time to pass, then it will monitor the loop pressure for two minutes. Upon finishing this test it will instruct the PCP that testing is finished.
- e. The PCP will leave the system as is until such time as the PCP selector switch is placed into a different mode.

3.14 OFF MODE

- a. Automatic starting of fueling pumps must be disabled. All other functions (GDP, alarm annunciator, operator interface, control valve solenoids, etc.) must be active to allow manual control of the fueling pumps using the Hand-Off-Auto or Hand-Auto switch.
- b. When the first pump has been started:
  - (1) The BPCV solenoid 'A' must be energized to enable the valve to modulate the system pressure at it's set point.
  - (2) The PCV solenoid 'A' must be energized to close the valve.
- c. The second and third pumps maybe started or stopped manually as needed by the operator.
- d. After the last pump has been stopped:
  - (1) The BPCV solenoid 'A' must be de-energized.
  - (2) The PCV solenoid 'A' must be de-energized.

### 3.15 MANUAL OPERATION OF FUELING PUMPS

- a. If the PLC system is still active see paragraph OFF MODE.
- b. If the PLC system has no power or both CPUs have faulted (CPU lights on PCP off) the pumping system will be in a completely manual mode. The safety circuit will need power so that the ESO solenoids on the non-surge check valves will be open and fuel can flow. The solenoids on the other solenoid controlled valves will be de-energized so the valves will have to be manually opened or enabled for the system to run. Other valves may need to be opened or closed manually by the operators for the system to work properly.

### 3.16 4-VALVE MANIFOLD SUPERVISION

\*\*\*\*\*  
**NOTE: The drawing referenced below is from the  
DEPARTMENT OF DEFENSE PRESSURIZED HYDRANT DIRECT  
FUELING SYSTEM Standard Drawings. Add the drawing  
to the design package if applicable.**  
\*\*\*\*\*

- a. Prior to initiating fueling operations in the automatic or in the test mode, the 4-valve manifold valves and the two tank outlet valves must be in the proper positions for successful fueling operations. The PLC must monitor valve positions of the 4-valve manifold (sensed by position limit switches for fully opened and fully closed status on valves I34, I35, R10, and R11) and by monitoring valve status on the tank outlet valves (sensed by position limit switches for fully opened and fully closed status on valves I1 and I2). Valve position must conform to the position table listed on drawing M-204b under "Storage Tank Selection".
- b. If the system is placed in automatic or test mode the valve selections must conform to the position table on sheet M-204b. If the valve positions do not conform to this table the PCP will show a 4-Valve manifold error on the alarm annunciator. The alarm can be silenced, but will not reset until such time as the valve positions do conform to the table.

-- End of Section --