


LEGEND

	Fire Extinguisher
	Eye Wash
	Thermostat
	Multiplex Comm/ Data System
	Security Key Pad
	Security Alarm
	Security Motion Detector
	Duplex Electrical Outlet
	Quadruplex Electrical Outlet
	Electrical Panel
	Power Entry
	Heavy Gauge Metal Mesh Door

DESIGN NOTES

1. Construct all walls of masonry and GW and extend to the structure above.
2. Locate emergency flashing light(s) for the hearing impaired person(s).
3. Provide heavy gauge metal mesh door on Bulk Storage side with Keypad access.
4. Provide a visual alarm on the narcotics locker in the vault.
5. Provide a motion detector, wall mounted and facing the entry to the vault.
6. Provide touch key pad access to unit from adjacent corridor(s).

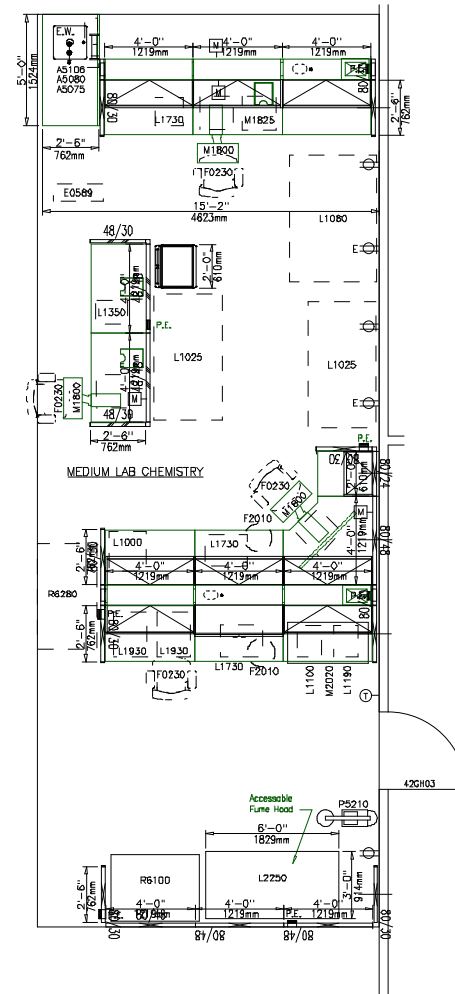

MEDIUM LAB CHEMISTRY (LMCH3)

MILCARE

FLOOR/EQUIPMENT PLAN

DATE: 11/26/2002

58.62 NSM (631 NSF) MIN.

0 1000 2000

1:50 SCALE (MILLIMETERS)

LEGEND



Light Fixture Emergency
On Power, Clinic Requires
Battery Ballast



Fixture Type a_1 (see note 2)
Control Switch a



Fixture Type a_1 (see note 2)
Control Switch a_3



Fixture Type b_1 (see note 5)
Control Switch a



Fixture Type c_1 (see note 4)
Control Switch a



Fixture Type a_1
Control Switch a_4



Ceiling HEPA Filter
(see note 6)



Fixture Type a_2 (see note 3)
Control Switch a_3



Ceiling Air
Diffuser



Ceiling Air
Return



Switch Fixture a



Switch Fixture a_3




Switch Fixture a_4



Ionization Smoke
Detectors

NOTES:

1. Use duplex receptacle computer isolation, on separate circuit when service not located in rail at all computer stations.
2. 2' x 4' (610mm x 1219mm) recessed floor. w/4 - F40 CW lamps
3. 2' x 2' (610mm x 610mm) recessed floor. w/2 - F20 CW lamps
4. 2' x 4' (610mm x 1219mm) recessed floor. w/3 - F40 CW lamps
5. 2' x 4' (610mm x 1219mm) recessed floor. w/2 - F40 CW lamps
6. Motorized Ceiling HEPA Filters, Class 10, 47 5/8" x 23 5/8" (1219mm x 609mm)

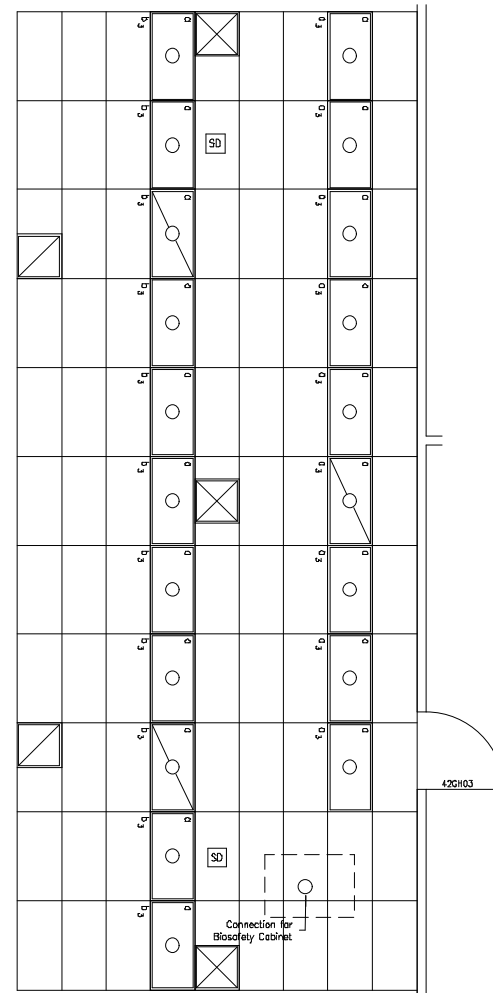

MEDIUM LAB CHEMISTRY (LMCH3)

MILCARE

CEILING PLAN

DATE: 11/26/2002

58.62 NSM (631 NSF) MIN.

0 1000 2000

1:50 SCALE (MILLIMETERS)

Project Rooms (User Contents Only)

As of 07/18/2005

Page 1

Room Code: LMCH3 Room Qty: 1 Room Area: 630.94 Room Description: MEDIUM LAB CHEMISTRY

JSN	NOMENCLATURE	Qty	UNIT ISSUE	LOG CAT	Utl 1	Utl 2	Utl 3	Utl 4	Utl 5	Utl 6
-----	--------------	-----	---------------	------------	----------	----------	----------	----------	----------	----------

Equipment per Room:

A5075	Dispenser, Soap, Disposable	1	EA	C	.	.	.	.	.	.
A5080	Dispenser, Paper Towel, SS, Surface Mounted	1	EA	A	.	.	.	.	.	.
A5106	Waste Disposal Unit, Sharps w/Glove Dispenser	1	EA	C	.	.	.	.	.	.
E0589	Workstation, Chemistry Lab, Medium	1	EA	F	A	A	.	.	.	.
F0230	Chair, Drafting, Rotary	4	EA	C	.	.	.	.	.	.
F2010	Basket, Wastepaper, Step-On	2	EA	C	.	.	.	.	.	.
L1000	Analyzer, Blood Chem, Auto, 60 Samples/Hour	1	EA	C	E	B	.	.	.	A
L1025	Analyzer, Chemistry, Drug Screening	2	EA	C	E	C	.	.	.	A
L1080	Analyzer, Chemistry, Multichannel	1	EA	C	E	D	.	.	.	.
L1100	Meter, pH	1	EA	C	.	A	.	.	.	.
L1190	Osmometer	1	EA	C	.	A	.	.	.	.
L1350	Centrifuge, Table, Small, 3200 RPM, 6 Place	1	EA	C	.	A	.	.	.	.
L1730		3								
L1930	Analyzer, pH/Blood Gas	2	EA	C	.	A	.	.	.	.
L2250	Hood, Fume, Bench	1	EA	A	I	F	.	.	.	E
M1800	Computer, Microprocessing, w/CRT Monitor	3	EA	C	.	A	.	.	.	.
M1825	Printer, Computer	1	EA	C	.	A	.	.	.	.
M2020	Cabinet, Storage, Safety, Built-In, Vented	1	EA	A	.	.	.	.	.	E
P5210	Shower, Safety, Freestanding, With Eye/Face Wash	1	EA	A	B	.	.	.	.	.
R6100	Freezer, Food, Upright, CRS, 23 Cu Ft, 84x27x37	1	EA	A	.	A	.	.	.	.
R6280	Refrigerator, Lab, SS, 2 Door, 6 Shelves	1	EA	C	.	A	.	.	.	.

GRAND TOTAL

=====

31