


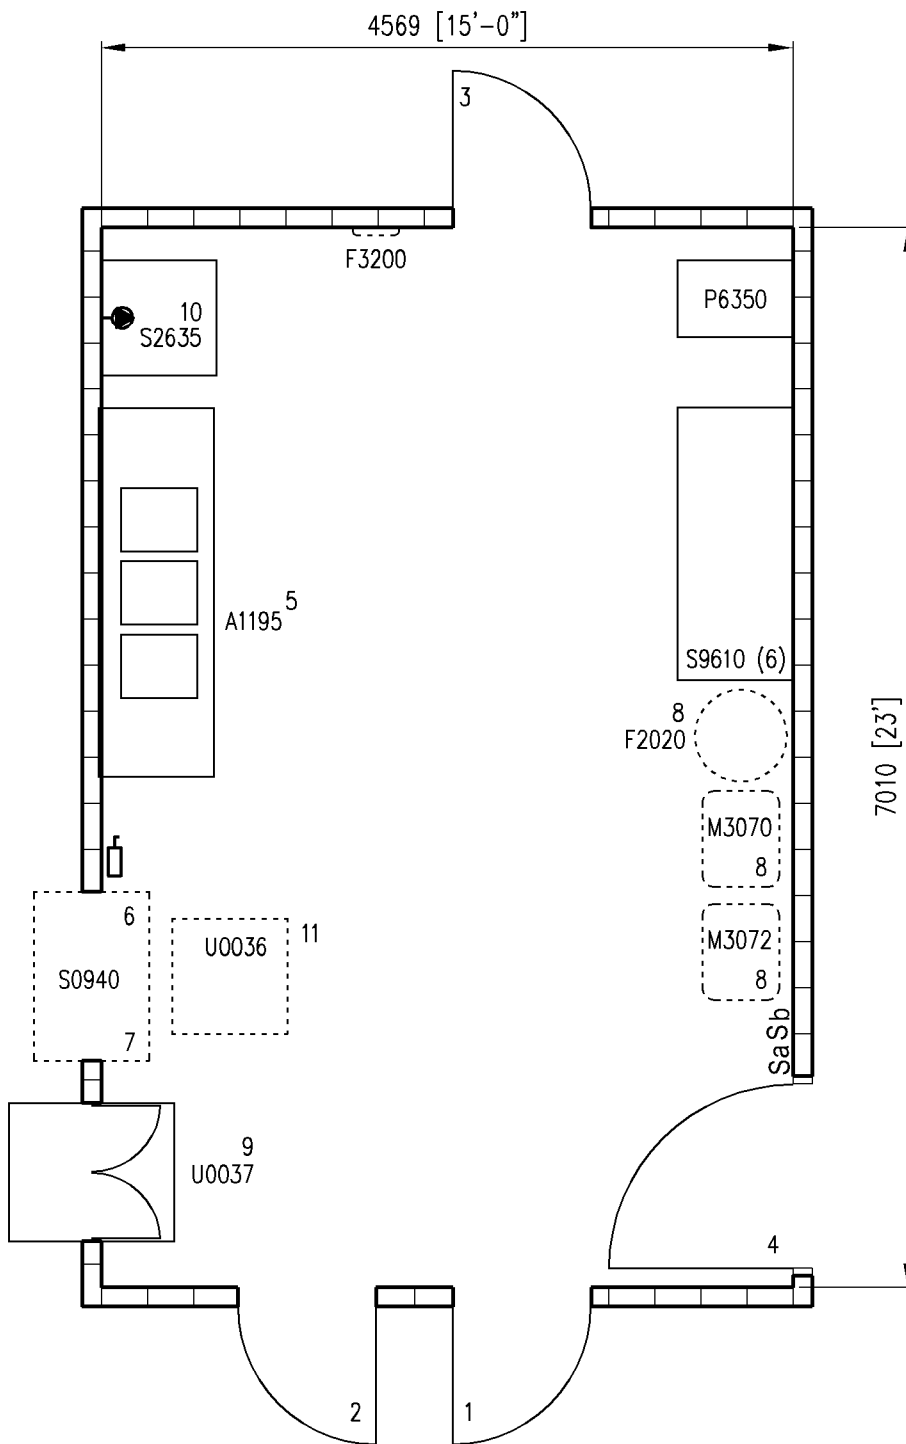

KEY NOTES:

1. PROVIDE DIRECT ACCESS TO STAFF INTERCHANGE RM. AND/OR DEDICATED STAFF TOILET ROOM EXCEPT FOR AMBULATORY SURGERY CENTERS.
2. PROVIDE DIRECT ACCESS TO HOUSEKEEPING CLOSET EXCEPT FOR AMBULATORY SURGERY CENTERS
3. PROVIDE DIRECT ACCESS TO EQUIPMENT/CART WASHROOM EXCEPT FOR AMBULATORY SURGERY CENTERS
4. 4'-0" MINIMUM DOOR. IF CASE CART EXCHANGE SYSTEM IS UTILIZED, PROVIDE DOUBLE DOOR. VERIFY WITH FACILITY USER.
5. VERIFY IF DISTILLED WATER RINSING REQUIRED WITH FACILITY USER. IF NOT, ONLY 2 COMPARTMENT SINK REQUIRED
6. STEAM WASHER/DISINFECTOR TO BE RUN OFF HOUSE STEAM OR STEAM GENERATOR VERIFY W/ FACILITY USER.
7. WASHER/DISINFECTOR CHEMICALS STORED IN REMOTE LOCATION
8. CONTAINER SIZE DEPENDENT ON CASE LOAD VERIFY WITH FACILITY USER
9. WASH RACK RETURN PASS THRU
10. VERIFY WITH FACILITY USER IF ULTRASONIC CLEANER IS REQUIRED
11. U0036 TRANSFER CART FOR WASHER/DISINFECTOR

* CONFIRM SEP IS CORRECT

CENTRAL STERILE, DECONTAMINATION MEDIUM (CSDE2) 4.05.02

CENTRAL STERILE

FLOOR / EQUIPMENT PLAN


32.05 NSM (345 NSF)

DATE: 04/24/2006

0 1000 2000



1:50 SCALE (MILLIMETERS)

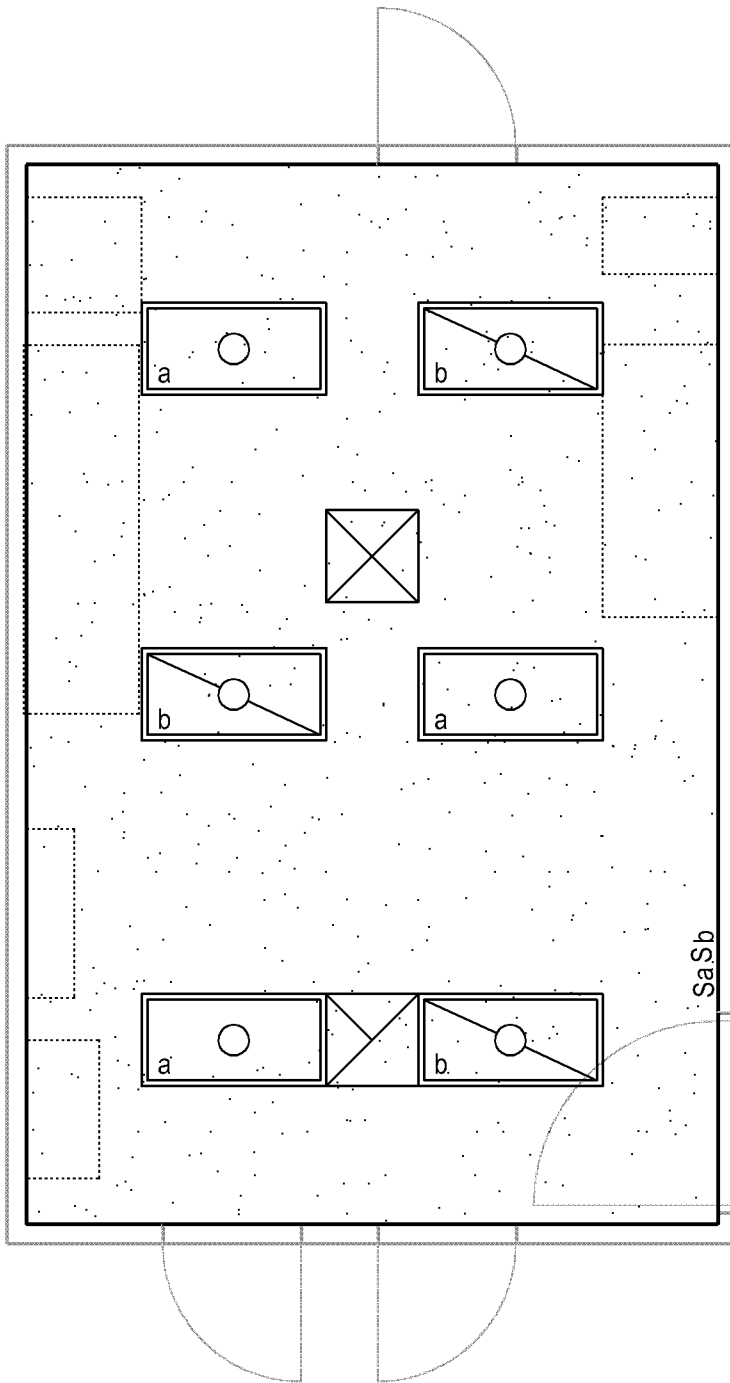

* CONFIRM SEP IS CORRECT

CENTRAL STERILE, DECONTAMINATION MEDIUM (CSDE2) 4.05.02

CENTRAL STERILE


CEILING PLAN

DATE: 04/24/2006

0 1000 2000



1:50 SCALE (MILLIMETERS)

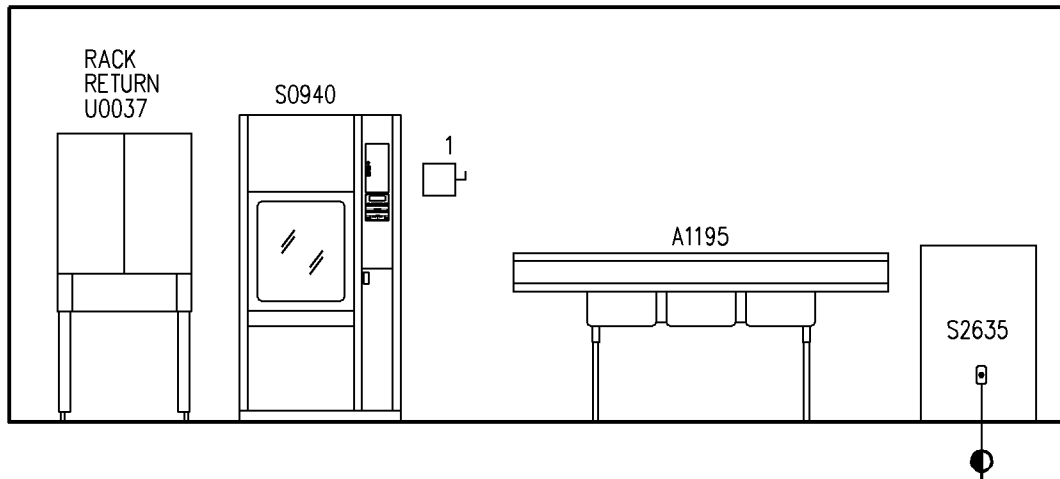

WEST

KEY NOTES: _____

1. WASHER/DISINFECTOR DISCONNECT

CENTRAL STERILE, DECONTAMINATION MEDIUM (CSDE2) 4.05.02

CENTRAL STERILE

ELEVATION

DATE: 04/24/2006

0 1000 2000



1:50 SCALE (MILLIMETERS)

Medical Equipment Room Guide Plates

4.05 Central Sterile

Plate Number 4.05.02

Room Name Central Sterile, Decontamination, Medium

SEPS# CSDE2

JSN	Nomenclature	Qty	Army Cat	Navy Cat	AF Cat	Utilities					
						1	2	3	4	5	6
A1195	Counter, Cleanup, with 2 or 3 Sinks	1	A	A	A	D	.	.	.	.	.
F2020	Can, Trash, 44 Gallon	1	C	C	C	.	.	.	.	.	.
F3200	Clock, Battery, 12" Diameter	1	C	C	C	.	.	.	.	.	.
M3070	Hamper Linen, Mobile, w/Lid	1	C	C	C	.	.	.	.	.	.
M3072	Frame, Infectious Waste Bag w/ Lid	1	C	C	C	.	.	.	.	.	.
P6350	Sink, Flushing, Rim, China, 18x26x22	1	A	A	A	D	.	.	.	.	.
S0940	Washer/Disinfector, Stm, 1 DO, RCSD1 WLL, 26X24X24 Chamber	1	C	C	C	F	G	D	A	E	.
S2635	Cleaner, Ultrasonic, Console, Dbl Chamber, CAB, F/S	1	A	A	A	D	F	.	.	.	.
S9610	Station, Utility/Rack	1	C	C	C	.	.	.	.	.	.
U0036	Cart, Transfer, Washer Rack	1	C	C	C	.	.	.	.	.	.
U0037	Rack Return, Washer	1	A	A	A	.	.	.	.	.	.