


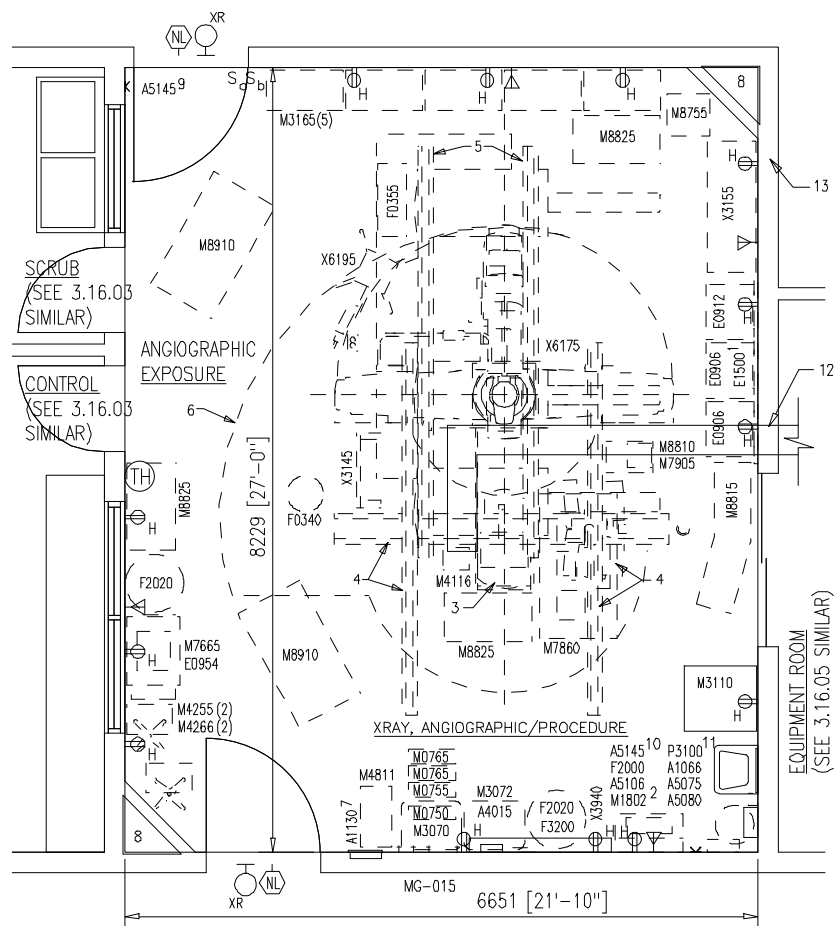

NOTES

1. RECEPTACLES ON CRITICAL POWER SHALL BE SERVED FROM TWO DIFFERENT CRITICAL BRANCH TRANSFER SWITCHES.

KEY NOTES

1. LENGTH OF E1500, WALL MOUNTED RAIL, TO BE DETERMINED BY MANUFACTURER/INSTALLER.
2. COORDINATE LOCATION OF ELECTRICAL OUTLETS WITH M1802, WALL MOUNTED, FOLD DOWN COMPUTER.
3. TABLE AND BASE FOR X6175, ANGIOGRAPHIC RAD/FLUORO UNIT.
4. MONITORS AND SUPPORT FOR X6175, ANGIOGRAPHIC RAD/FLUORO UNIT.
5. STATIONARY RAIL FOR X6175, ANGIOGRAPHIC RAD/FLUORO UNIT.
6. RANGE OF MOVEMENT FOR X6175, ANGIOGRAPHIC RAD/FLUORO UNIT.
7. LOCATION AND QUANTITY OF A1130, NITROGEN CONTROL CABINET, MAY VARY.
8. THESE CHASES ARE PROVIDED FOR THE LOW RETURN AIR. SIZE AND SHAPE MAY VARY.
9. MOUNT A5145, HOOK, AT 1372 [4'-6"] AFF.
10. MOUNT A5145, HOOK, AT 1524 [5'-0"] AFF.
11. P3200, ELECTRONIC LAVATORY, MAY BE USED INSTEAD OF P3100, LAVATORY. FOR THE P3200 PROVIDE EITHER BATTERY POWER OR HARD WIRED CONNECTION.
12. 305mm [12"] W x 64mm [2 1/2"] D FLOOR TRENCH DUCT (OPTIONAL).
13. DOUBLE-STUD LEAD LINED PARTITION. SHIELD REQUIREMENTS REQUIRE REVIEW BY PHYSICIST.

XRAY, ANGIOGRAPHIC/PROCEDURE (XABP1)

RADIOLOGY/NUCLEAR MEDICINE


0 1000 2000

FLOOR/EQUIPMENT PLAN

54.73 NSM (589 NSF)

DATE: 01/28/2002

1:50 SCALE (MILLIMETERS)

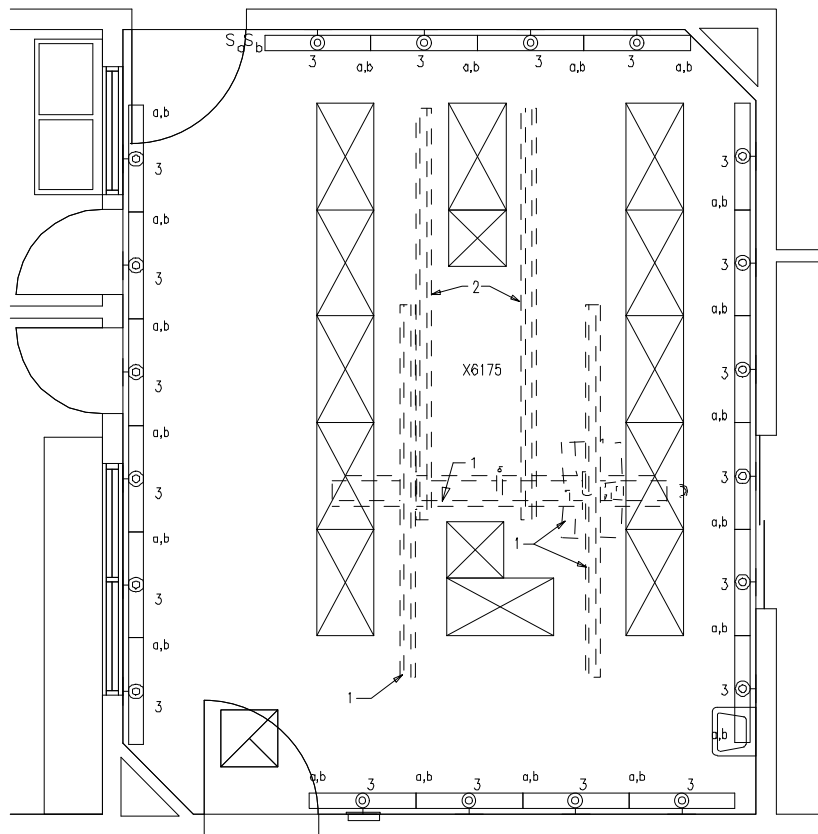

KEY NOTES

1. MONITORS AND SUPPORT FOR X6175, ANGIOGRAPHIC RAD/FLUORO UNIT.
2. STATIONARY RAIL FOR X6175, ANGIOGRAPHIC RAD/FLUORO UNIT.
3. PROVIDE UP AND DOWN LIGHT IN FIXTURE. SWITCH UP AND DOWN LIGHT SEPARATELY. COORDINATE MOUNTING HEIGHT AND LOCATION OF FIXTURES WITH EQUIPMENT.

XRAY, ANGIOGRAPHIC/PROCEDURE (XABP1)

RADIOLOGY/NUCLEAR MEDICINE


0 1000 2000

CEILING PLAN


54.73 NSM (589 NSF)

DATE: 01/28/2002

1:50 SCALE (MILLIMETERS)

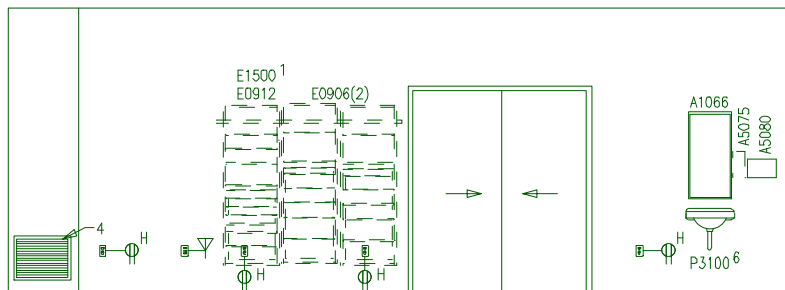

EAST

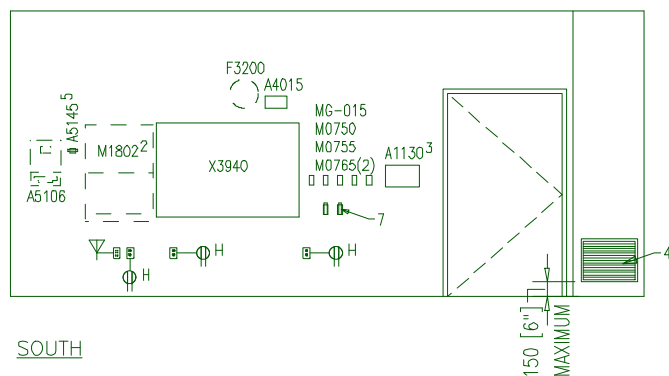

SOUTH

□

KEY NOTES

1. LENGTH OF E1500, WALL MOUNTED RAIL, TO BE DETERMINED BY MANUFACTURER/INSTALLER.
2. COORDINATE LOCATION OF ELECTRICAL OUTLETS WITH M1802, WALL MOUNTED, FOLD DOWN COMPUTER.
3. LOCATION AND QUANTITY OF A1130, NITROGEN CONTROL CABINET, MAY VARY.
4. LOW RETURN AIR REGISTER.
5. MOUNT A5145, HOOK, AT 1524 [5'-0"] AFF.
6. P3200, ELECTRONIC LAVATORY, MAY BE USED INSTEAD OF P3100, LAVATORY. FOR THE P3200 PROVIDE EITHER BATTERY POWER OR HARD WIRED CONNECTION.
7. VACUUM SLIDE.

General Notes:

1. For typical equipment mounting heights see "TYPICAL EQUIPMENT MOUNTING HEIGHTS" drawing.
2. MIL-STD-1691 data can only be accessed from the Equipment Plan.

XRAY, ANGIOGRAPHIC/PROCEDURE (XABP1)

RADIOLOGY/NUCLEAR MEDICINE

0 1000 2000

ELEVATIONS

54.73 NSM (589 NSF)

DATE: 01/28/2002

1:50 SCALE (MILLIMETERS)

Project Rooms (User Contents Only)

As of 10/04/2005

Page 1

Room Code: XABP1 Room Qty: 1 Room Area: 589.13 Room Description: XRAY, ANGIOGRAPHIC/PROCEDURE

JSN	NOMENCLATURE	Qty	UNIT ISSUE	LOG CAT	Utl 1	Utl 2	Utl 3	Utl 4	Utl 5	Utl 6
Equipment per Room:										
A1066	Mirror, Float Glass, With SS Frame, 36X18	1	EA	A	.	.	.	.	.	.
A1130	Cabinet, Control, Nitrogen	1	EA	A	.	B	.	.	.	.
A4015	Clock, Elapsed Time, Electric	1	EA	A	.	A	.	.	.	D
A5075	Dispenser, Soap, Disposable	1	EA	C	.	.	.	.	.	.
A5080	Dispenser, Paper Towel, SS, Surface Mounted	1	EA	A	.	.	.	.	.	.
A5106	Waste Disposal Unit, Sharps w/Glove Dispenser	1	EA	C	.	.	.	.	.	.
A5145	Hook, Garment, Double, SS, Surface Mounted	2	EA	A	.	.	.	.	.	.
E0906	Locker, Supply, General, Wall Mtd, 23"W x 20"D	2	EA	C	.	.	.	.	.	.
E0912	Locker, Supply, Med Surg, Wall Mtd	1	EA	C	.	.	.	.	.	.
E0954	Cart, Emergency, Mobile, 66"H x 52"W x 22"D	1	EA	C	.	.	.	.	.	.
E1500	Rail, MOD, W/MNTD, HX144XD	1	EA	C	.	.	.	.	.	.
F0340	Stool, Self Adjusting	1	EA	C	.	.	.	.	.	.
F0355	Footstool, Straight	1	EA	C	.	.	.	.	.	.
F2000	Basket, Wastepaper, Round, Metal, 18 H x 16 Dia.	1	EA	C	.	.	.	.	.	.
F2020	Can, Trash, 44 Gallon	2	EA	C	.	.	.	.	.	.
F3200	Clock, Battery, 12" Diameter	1	EA	C	.	.	.	.	.	.
M0750	Flowmeter, Air, Connect w/50 PSI Supply	1	EA	C	.	.	K	.	.	.
M0755	Flowmeter, Oxygen, Low Flow	1	EA	C	.	.	A	.	.	.
M0765	Regulator, Vacuum	2	EA	C	.	.	B	.	.	.
M1802	Work Station, Computer, Retractable, Wall Mount	1	EA	C	.	G	.	.	.	D
M3070	Hamper, Linen, Mobile, w/Lid	1	EA	C	.	.	.	.	.	.
M3072	Frame, Infectious Waste Bag w/Lid	1	EA	C	.	.	.	.	.	.
M3110	Cabinet, Warming, F/S, 2 Heated Compartment, Ele	1	EA	A	.	F	.	.	.	.
M3165	Cabinet, Catheter Storage	5	EA	C	.	.	.	.	.	.
M4116	Monitor, Vital Signs	1	EA	C	.	A	.	.	.	.
M4255	Stand, IV, Adjustable	2	EA	C	.	.	.	.	.	.
M4266	Pump, Volumetric, Infusion, Multiple Line	2	EA	C	.	A	.	.	.	.
M4811	Pump, Intra-Aortic, Balloon	1	EA	C	.	A	.	.	.	.
M7665	Defibrillator/Monitor/Recorder Automatic	1	EA	C	.	A	.	.	.	.
M7860	Monitoring System, Cardiac Catheterization Lab	1	EA	C	.	A	.	.	.	.
M7905	Oximeter, Pulse	1	EA	C	.	A	.	.	.	.
M8755	Aspirator, Low Pressure/Low Volume, Surgical	1	EA	C	.	A	.	.	.	.
M8810	Stand, Mayo	1	EA	C	.	.	.	.	.	.

M8815	Table, Instrument/Dressing, Angular	1
M8825	Table, Instrument/Dressing, CRS, approx. 36x20x3	3
M8910	Cart, Surgical Case	2
P3100	Lavatory, Vitreous China, Slab Type	1
X3145	Screen, X-Ray, Protective, Mobile	1
X3155	Rack, Apron/Gloves, Mobile	1
X3940	Illuminator, Film, 8 Panels, Wall Mounted	1
X6175	Radiographic/Fluoro Unit, Angio, Biplane, Digita	1
X6195	Injector, Angiographic	1
		=====
GRAND TOTAL		55

EA	C	.	.	.	.	.	.
EA	C	.	.	.	.	.	.
EA	C	.	.	.	.	.	.
EA	A	D	.	.	.	.	.
EA	C	.	.	.	.	.	.
EA	C	.	.	.	.	.	.
EA	A	.	A	.	.	.	.
EA	F	.	F	.	.	.	B
EA	F	.	B	.	.	.	.