

NOTES

1. PROVIDE AN "IN USE" LIGHT IF REQUIRED.


KEY NOTES

- QUANTITY OF X5320, FILM PROCESSOR, X5325, CHEMICAL MIXER, AND X5416, SILVER RECOVERY UNIT, MAY VARY ACCORDING TO WORK LOAD.
- PROVIDE A X1600, TRANSFER CABINET, ONLY WHEN THE PROCESSING ROOM IS ADJACENT TO A RADIOLOGY ROOM. COORDINATE THE LOCATION OF THE X1600 WITH ITS POSITION IN THE RADIOLOGY ROOM.
- MOUNT A5145, HOOK, AT 1372 [4'-6"] AFF. PROVIDE 2-A5145'S FOR NAVY PROJECTS ONLY. MOUNT 1-A5145 AT 1372 [4'-6"] AFF AND 1-A5145 AT 1524 [5'-0"] AFF.
- P6150, SINK, IS REQUIRED ONLY FOR THRU WALL FILM PROCESSOR SYSTEMS, X5320. THIS IS
 TO BE LOCATED OUTSIDE THE PROCESSING ROOM AND WITHIN PROXIMITY TO THE X5320.
- X5416, SILVER RECOVERY UNIT, IS PROVIDED BY THE DEFENSE REUTILIZATION SERVICE AND MARKETING OFFICE.


FILM PROCESSING (XFP01)


 RADIOLOGY/NUCLEAR MEDICINE
 0
 1000
 2000

 FLOOR/EQUIPMENT PLAN
 10.40 NSM (112 NSF)
 1:50 SCALE (MILLIMETERS)

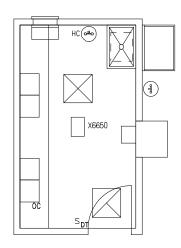

FILM PROCESSING (XFP01)

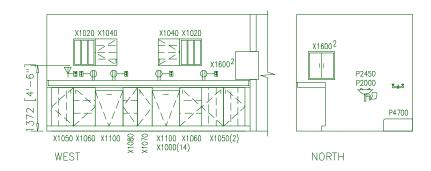

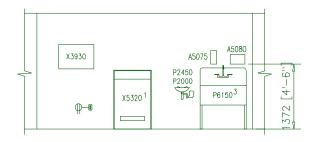

WEST (ADJOINING ROOM)

- QUANTITY OF X5320, FILM PROCESSOR, MAY VARY ACCORDING TO WORK LOAD.
 PROVIDE A X1600, TRANSFER CABINET, ONLY WHEN THE PROCESSING ROOM IS ADJACENT. TO A RADIOLOGY ROOM. COORDINATE THE LOCATION OF THE X1600 WITH ITS POSITION IN THE RADIOLOGY ROOM.
- 3. P6150, SINK, IS REQUIRED ONLY FOR THRU WALL FILM PROCESSOR SYSTEMS, X5320. THIS IS TO BE LOCATED OUTSIDE THE PROCESSING ROOM AND WITHIN PROXIMITY TO THE X5320.

General Notes:

- For typical equipment mounting heights see "TYPICAL EQUIPMENT MOUNTING HEIGHTS" drawing.
- 2. MIL-STD-1691 data can only be accessed from the Equipment Plan.

FILM PROCESSING (XFP01

0 1000 2000 RADIOLOGY/NUCLEAR MEDICINE ELEVATIONS 10.40 NSM (112 NSF) DATE: 07/12/2001 1:50 SCALE (MILLIMETERS)

As of 10/04/2005 Page 1

Room Code: XFPO1 Room Qty: 1 Room Area: 111.97 Room Description: FILM PROCESSING

JSN	NOMENCLATURE	Qty	UNIT ISSUE	LOG CAT	Utl 1	Utl 2	Utl 3	Utl 4	Utl 5	Utl 6
-			1550E	CAI				- 1		
Equipment per Room:										
A5075	Dispenser, Soap, Disposable	1	EA	С						
A5080	Dispenser, Paper Towel, SS, Surface Mounted	1	EA	A	•	•		•	•	•
A5145	Hook, Garment, Double, SS, Surface Mounted	1	EA	A		·	Ī			·
P2000	Eyewash, Wall Mounted, Hands-Free	2	EA	A	В	•		•	•	•
P2450	Valve, Mixing, Thermostatic	3	EA	A	A		-			
P4700	Sink, Mop, Molded Stone, 10x36x24	1	EA	A	D					
P6150	Sink, Cage Washing, SS, Single Compartment, F/S	1	EA	A	D					
X1000	Benchtop, Plastic, Laminated, 5H x L x 23D	14	EA	A						
X1020	Cabinet, Wall Hung, With (3), 5 Inch Compartment	2	EA	A						
X1040	Cabinet, Wall Hung, 1 Door, 3 Shelves, 22x18x21	2	EA	A						
X1050	Cabinet, Base, (3), 5 Inch Compartments, 36x18x2	3	EA	A						
X1060	Cabinet, Base, 1 Door, 37x18x22	2	EA	A						
X1070	Bin, Receptacles, Waste, 37x12x22	1	EA	A						
X1080	Cabinet, Base, Film Identifier, 36x12x22	1	EA	A						
X1100	Bin, Loading, Film, 33x23x15	2	EA	A		F				
X1600	Cabinet, Transfer, Cassette, 4 Door, 2 Compartme	1	EA	A						
X3930	Illuminator, Film, Double, Wall Mounted, 20x29x6	1	EA	С		A				
X5320	Processor, Film, 90 Seconds	1	EA	F	В	C				E
X5325	Mixer, Chemical, Automatic	1	EA	В	J	A				
X5416	Silver Recovery System, 5 Gallon	1	EA	С		A				
X6650	Safelight, Darkroom, Wall or Bench Mounted	1	EA	A		A				
=======										
GRAND TOTAL		43								